

Bluetooth

Bluetooth module for Nucular Controller

Introduction

This guide outlines the steps to connect a Bluetooth module to your Nucular controller using the System cable CAN 12V. This wireless connection provides a convenient way to control the Nucular controller without the need of the display. Additionally, it includes information on updating the Bluetooth module firmware for enhanced functionality and some basic troubleshooting.

Prerequisites:

1. Nucular controller
2. Bluetooth module
3. System cable CAN 12V
4. Power source for the Nucular controller
5. Compatible Android device (e.g., smartphone, tablet)

Install the Bluetooth module

Step 1: Connect the Bluetooth Module to System Cable CAN 12V Use the System cable CAN 12V to connect the Bluetooth module to the designated port on the Nucular controller. Ensure a secure and stable connection.

Step 2: Enable Bluetooth on Your Device On your smartphone or tablet, navigate to the Bluetooth settings and enable Bluetooth functionality.

Step 3: Pairing the Devices on the application Download and install this application: (LINK HAVE TO BE PROVIDED BY ADMIN) The password is **111122**

From:

<https://docs.nucular.tech/> - **Nucular Electronics**

Permanent link:

<https://docs.nucular.tech/doku.php?id=en:bluetooth&rev=1704032297>

Last update: **2023/12/31 15:18**