

# Bluetooth

Bluetooth module for Nucular Controller, please note that this module currently in BETA, available for testing on request.

Join telegram group to participate in test: [External Link](#)

**App for Apple:** [joint public test](#)



**App for Android:** [download app](#)

## Introduction

This guide outlines the steps to connect a Bluetooth module to your Nucular controller using the System cable (CAN). This wireless connection provides a convenient way to control the Nucular controller without the need of the display. Additionally, it includes information on updating the Bluetooth module firmware for enhanced functionality and some basic troubleshooting.

## Prerequisites:

1. Nucular controller
2. Bluetooth module
3. System cable (CAN) with 12V supply
4. Power source for the Nucular controller
5. Compatible Android or Apple device (e.g., smartphone, tablet)

## Install the Bluetooth module

### Step 1: Connect the Bluetooth Module to System Cable (CAN)

Use the System cable (CAN) to connect the Bluetooth module to the designated port on the Nucular controller. Ensure a secure and stable connection.

### Step 2: Enable Bluetooth on Your Device

On your smartphone or tablet, navigate to the Bluetooth settings and enable Bluetooth functionality.

### Step 3: Pairing the Devices on the application

Download and install application from telegram group.

The password is **111122**

## Files

At the moment files stored in following directory: Download folder

From:

<https://docs.nucular.tech/> - **Nucular Electronics**

Permanent link:

<https://docs.nucular.tech/doku.php?id=en:bluetooth&rev=1733985328>

Last update: **2024/12/12 07:35**