

# Bluetooth

Bluetooth module for Nucular Controller, please note that this module currently in BETA, available for testing on request.

Join telegram group to participate in test: [External Link](#)

**App for Apple:** [join public test](#)



**App for Android:** [download app v1.0.25](#)



## Introduction

This guide outlines the steps to connect a Bluetooth module to your Nucular controller using the System cable (CAN). This wireless connection provides a convenient way to control the Nucular controller without the need of the display. Additionally, it includes information on updating the Bluetooth module firmware for enhanced functionality and some basic troubleshooting.

## Prerequisites:

1. Nucular controller
2. Bluetooth module
3. System cable (CAN) with 12V supply
4. Power source for the Nucular controller
5. Compatible Android or Apple device (e.g., smartphone, tablet)

## Install the Bluetooth module

### **Step 1: Connect the Bluetooth Module to System Cable (CAN)**

Use the System cable (CAN) to connect the Bluetooth module to the designated port on the Nucular controller. Ensure a secure and stable connection.

### **Step 2: Enable Bluetooth on Your Device**


On your smartphone or tablet, navigate to the Bluetooth settings and enable Bluetooth functionality.

### **Step 3: Pairing the Devices on the application**

The password is **111122**

## Files

At the moment files stored in following directory: Android: Download folder iPhone: Export controller configuration to create 'Nucular App' folder in 'My iPhone'

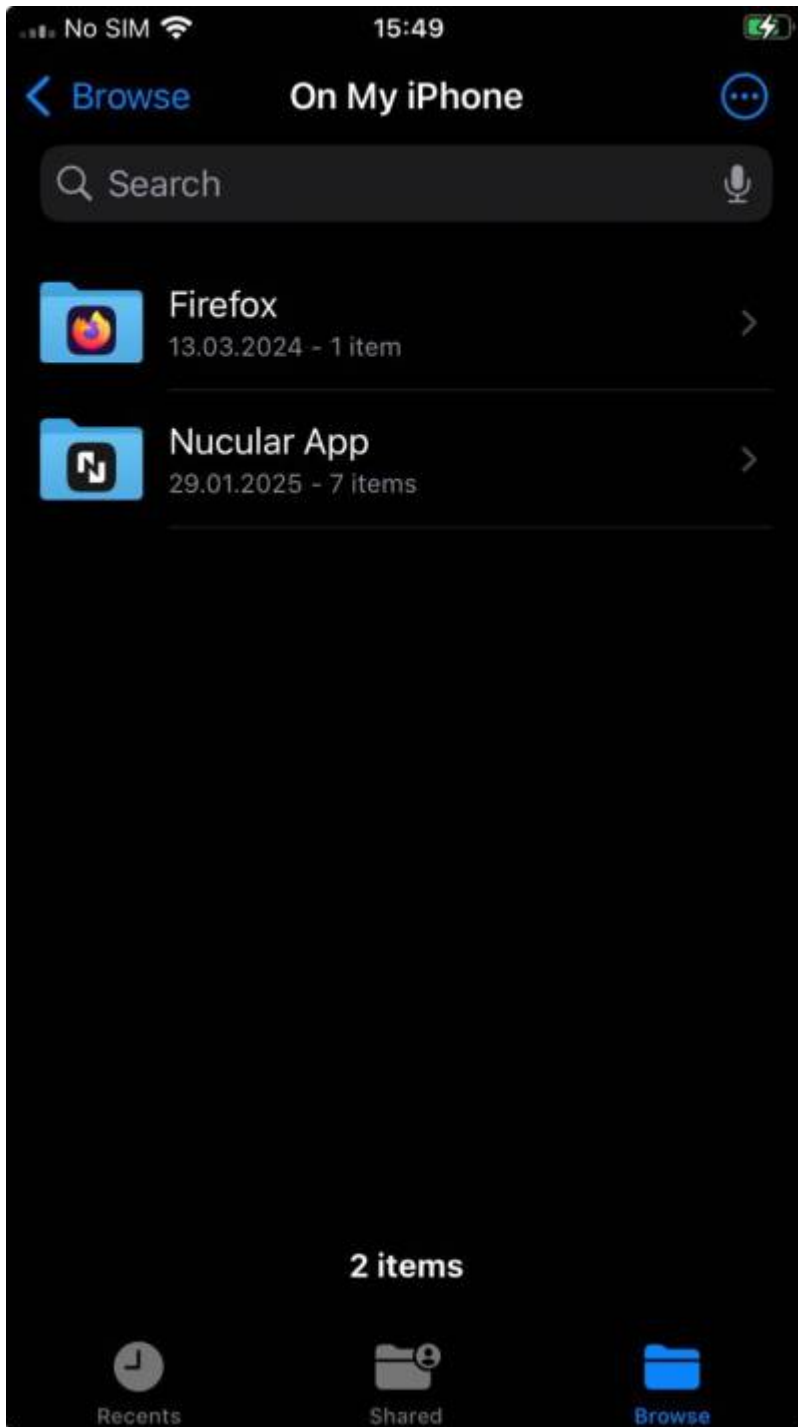

From: <https://docs.nuclear.tech/> - **Nuclear Electronics**

Permanent link: <https://docs.nuclear.tech/doku.php?id=en:bluetooth&rev=1755142890>

Last update: **2025/08/14 05:41**