

On-board computer (v.0.6B)

The On-board computer is equipped with a large sunlight resistant screen to display main parameters, driving modes settings, software updates for all system components, battery control, and the charging state of the devices via USB. On the left side of the On-board computer there is a slot for a microSD card, which is used to update the firmware, save screenshots, import and export configurations and settings of the On-board computer and Controller. On the back of the On-board computer there is a power button, which is [configured](#) in the menu **Devices > Controller > Extra parameters > Disable button**.

Technical specifications:

- LCD size 3.6"
- FSTN, monochrome
- Screen resolution 240×128 px
- Screen heating
- RGB-button backlight
- MicroSD slot
- USB-charger 5.2V 2A
- Password protection
- Multi-Language (English, Russian)
- IP65 class


In the kit:

- GoPro fork mount.
- USB charging wire.
- PHD 2.0 4P connector — 4 pcs.
- PHD 2.0 6P connector — 1 pcs.
- PHD 2.0 8P connector — 1 pcs.
- Pins for crimping — 26 pcs.
- If you don't have a crimping tool, you need to order "Crimped wires for the Display".

Connection diagram


You can look at the connection diagrams for other devices at this [link](#). By default, all control devices (thumb throttle, brake levers, switches, etc.) are connected to the ports located on the back of the On-Board Computer. To access, you need to unscrew five screws and remove the plastic cover. For connection, PHD 2.0 connectors and crimp pins are used, which are included in the kit. If you do not have a crimping wire tool, for example, SN-2549, then you need to order "Crimped wires for Display". The On-board computer is connected to the Controller with one CAN-wire 1.2 meters length, which is included in the Controller kit. Note, the CAN-wire from the Controller should be connected to the **SYSTEM** port on the On-Board Computer.

If you want to connect control devices directly to the Controller, you need to order "Controller-side inputs", in the diagram at the link above this switching option is designated as "Alternative connection". You can also use a mixed connection option, for example, connect the thumb throttle to the On-board computer, and the brake levers to the Controller.

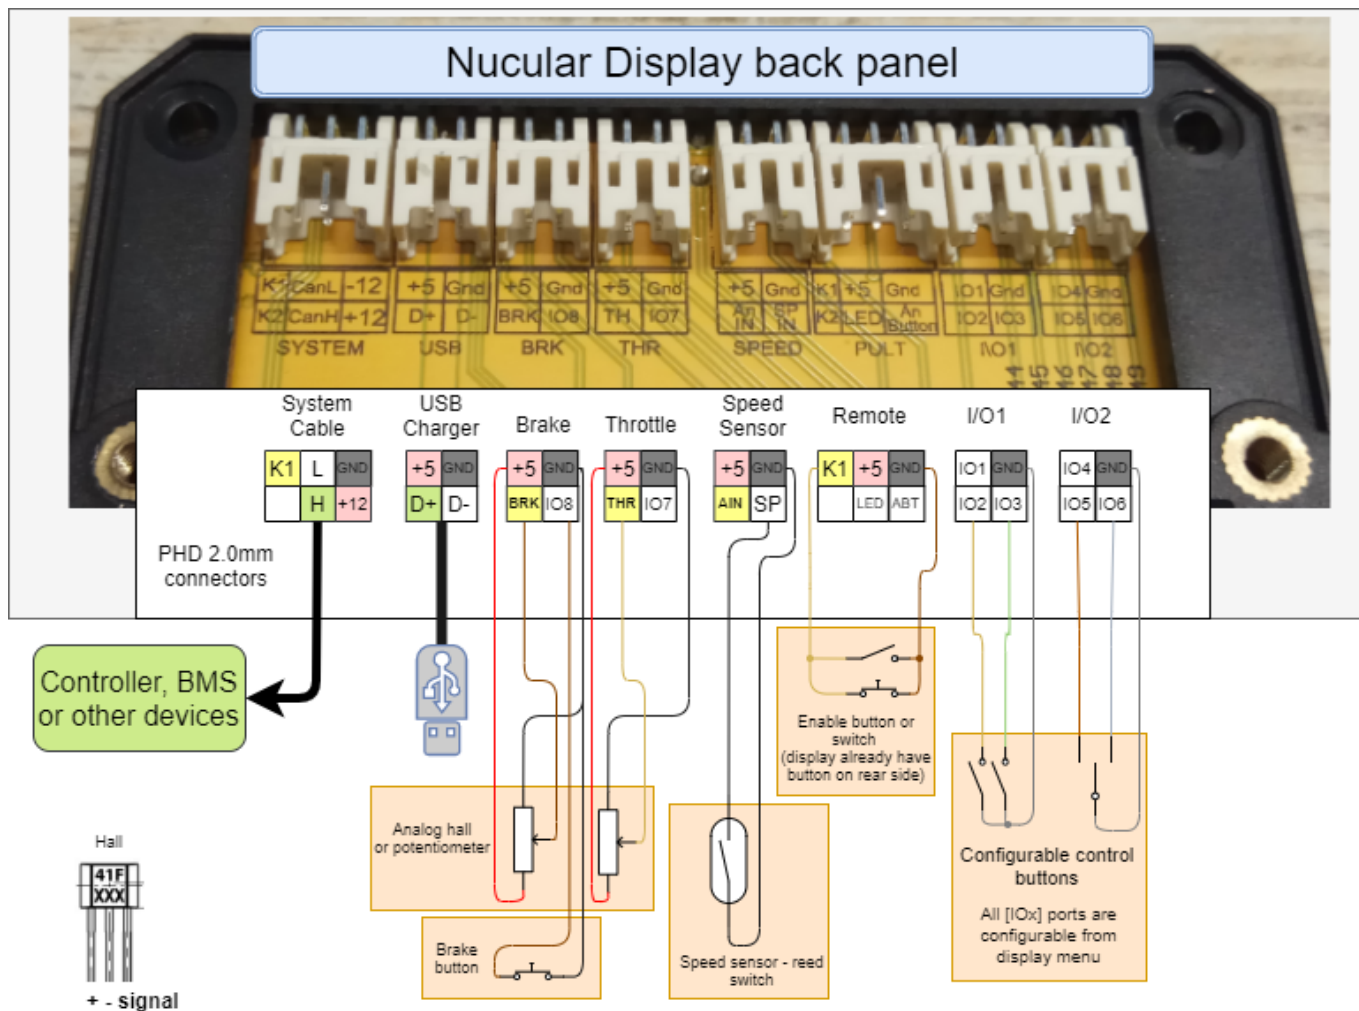

The main screen overview

The screenshot below is one of the Main screen configurations. The layout of the elements on the screen depends on the theme and settings. In this example, the Hurma theme is installed.

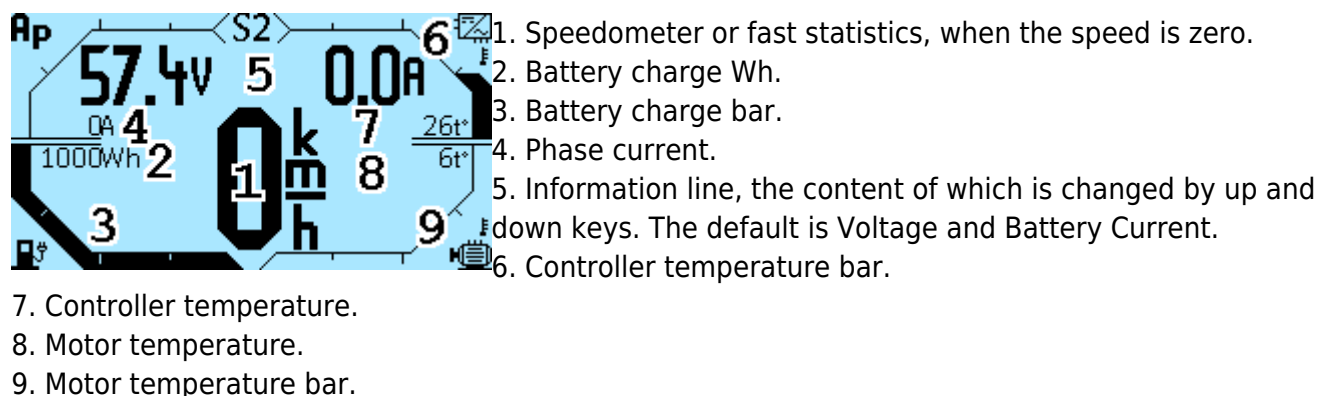


Menu navigation

Navigation on the On-board computer screen is carried out by the four bottom buttons. By holding down the two central buttons, you can take a screenshot of the screen, the file will be saved in .bmp

format on the microSD card (if it is inserted into the On-board computer). Functions of the On-board computer buttons, from left to right:

- Switch the menu screen, cancel, return to the previous menu
- Switch up, less
- Switch down, more
- Select, apply

The picture below shows the menu navigation diagram, the red arrow is the left button, the blue arrows are the two central buttons, the green arrow is the right button of the Onboard computer.

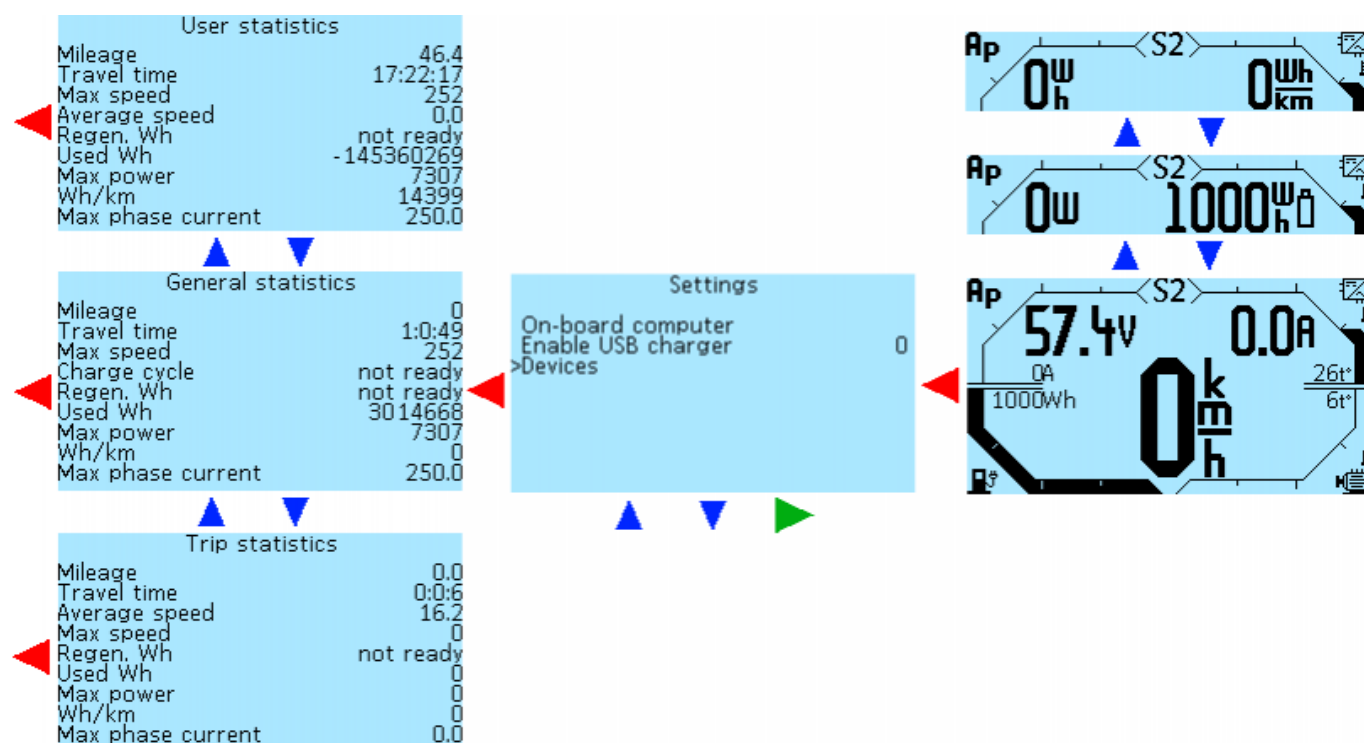

Statistics

To go from the main screen to the statistics section, double-click the left button of the On-board computer. Then, with the second and third buttons, you can switch screens with statistics **General statistics** > **User statistics** > **Trip statistics** > **From charge statistics**.

General statistics	
Mileage	0
Travel time	1:0:49
Max speed	252
Charge cycle	not ready
Regen. Wh	not ready
Used Wh	3014668
Max power	7307
Wh/km	0
Max phase current	250.0

There are four types of statistics available:

General statistics — statistics for all time of using the Controller and On-Board Computer.

User statistics — statistics for any time period you choose. You can reset the data when you need it.

Trip statistics — statistics since the Controller was turned on.

From charge statistics — statistics between battery charges.

User statistics	
Mileage	46.4
Travel time	17:22:17
Max speed	252
Average speed	0.0
Regen. Wh	not ready
Used Wh	-145360269
Max power	7307
Wh/km	14399
Max phase current	250.0

Trip statistics	
Mileage	0.0
Travel time	0:0:6
Average speed	16.2
Max speed	0
Regen. Wh	not ready
Used Wh	0
Max power	0
Wh/km	0
Max phase current	0.0

From charge statistics	
Mileage	0
Travel time	0:9:37
Max speed	0
Average speed	0.0
Regen. Wh	0
Used Wh	0
Max power	0
Wh/mi	0
Max phase current	0.0

The list of parameters that are displayed for each type of statistics are the same and are calculated based on the type of statistics, with the exception of the **Charge Cycles** in the General statistics, instead of this item, in all other types of statistics is displayed the **Average speed** indicator, which is calculated while driving.

Mileage — mileage in kilometers or miles (depending on settings).

Travel time — driving time, hours, minutes, seconds.

Max speed — maximum speed, km/h or mph (depending on settings).

Charge cycle — number of battery charging cycles (for General statistics only).

Average speed — average speed, km/h or mph (depending on settings).

Regen Wh — the amount of energy returned to the battery during regenerative braking, in watt-hours (Wh).

Used Wh — the amount of energy consumed, watt-hours (W*h).

Max power — maximum power, watts (W).

Wh/km (Wh/mi) — the amount of consumed watt-hours of the battery per kilometer (or per mile) of run, (Wh/km or Wh/mi).

Max phase current — maximum phase current, amperes (A).

Statistics reset:

General — go to the **General statistics** screen, press and hold the left button of the On-board computer, the system will ask for a password, enter the default password or your custom password. For more information on setting up a password, read the Password setup section. After entering the password, the statistics will be reset. If you do not enter the password, then you can return to the main menu only after restarting the On-board computer. You can do this either by deactivating or using the button on the back of the Trip Computer, provided that you have configured it in the section **Devices > Controller > Extra parameters > Disable button**.

User — go to the **User statistics** screen, press and hold the left button of the On-board computer, the statistics will be reset.

Trip — statistics are reset automatically after controller shutdown.

From charge — statistics are reset automatically after full battery charging.

Menu and settings overview

Pressing the left button on the On-board Computer on the Main screen will take you to the **Settings** menu.

On-board computer — setting the parameters and functions of the On-board computer.

Enable USB charger — enable USB

charging, see below for setting description.

Devices — list of all connected devices and transition to the menu of each of them for setting.

USB charger setup

A USB cable for charging your gadgets is included in the kit and plugs into the USB port on the rear panel of the On-Board Computer. To enable charging, go to **Settings > Enable USB charger**, press the right button to select, and then change the value from **0** to **1** with the third button. Then press the right button to save the value and turn on USB charging. If you want the USB charging to be always active when the On-Board Computer is switched on, go to On-Board Computer > Save and save this setting. If this is not done, then when the On-Board Computer is turned on again, the USB charging will be disabled

Buttons setup		
Hot key 1 type	Button	
>Hot key 1 func.	USB Charger	
Hot key 2 type	Button	
Hot key 2 func.	CAN Button2	
Hot key 3 type	Button	
Hot key 3 func.	CAN Button3	
Hot key 4 type	Button	
Hot key 4 func.	Nothing	

You can also configure the activation of charging by pressing and holding one of the buttons on the On-Board Computer (Hot key). To configure this function, go to **On-board computer > Buttons setup**, select which button you want to enable charging. Next, select the **Button** in **Hot key type** and the USB Charge in **Hot key func**. In the screenshot, we made such a setting for the first button of the On-board computer (Hot key 1). After setting, go to

the **On-board computer** > **Save** and save. Done. USB charging can now be turned on/off by pressing and holding the first button of the On-Board Computer when the main screen is displayed.

Information

The menu section **Onboard computer** > **Information** displays data from all sensors and devices connected to the Onboard computer.

Supply V 12.12	ACC Z 0	Supply V — CAN bus supply voltage, Volts (V).
Int +5V 5.17	Comp t 39	Int V — internal power supply and USB-output voltage, Volts (V).
Light V 2.36	Input 1 func. 0	Light V — light sensor voltage, volts (V).
ThrottleV 0.00	Input 2 func. 0	Throttle V — throttle handle voltage, Volts (V).
Brake V 0.00	Input 3 func. 0	Brake V — brake handle voltage, Volts (V).
ACC X 0	Input 4 func. 0	ACC X — accelerometer readings X-axis.
ACC Y 0	Input 5 func. 0	ACC Y — accelerometer readings Y-axis.
		ACC Z — accelerometer readings Z-axis.
		Comp t — On-board computer processor temperature, degrees Celsius (°C).
Input 6 func. 0		Input 1 func. — input IO1 of the I/O1 port on the rear panel of the Onboard computer (see the diagram in the Connection section), the value changes from 0 to 1 when the button connected to the Onboard computer is pressed, see the Buttons setup section, the other inputs have are the same values
Input 7 func. 0		Input 2 func. — input IO2 of the I/O1 port.
Input 8 func. 0		
CAN_OVR 0		
CAN_LEC 3		
CAN_TEC 128		
CAN_REC 0		

Input 3 func. — input **IO3** of the **I/O1** port.

Input 4 func. — input **IO4** of the **I/O2** port.

Input 5 func. — input **IO5** of the **I/O2** port.

Input 6 func. — input **IO6** of the **I/O2** port.

Input 7 func. — input **IO7** of the **THR (Throttle)** port.

Input 8 func. — input **IO8** of the **BRK (Brake)** port.

CAN_OVR — CAN bus error.

CAN_LEC — CAN bus error.

CAN_TEC — CAN bus error.

CAN_REC — CAN bus error.

Settings saving

All made settings can be saved in the menu **On-board computer** > **Save**. Press the right button of the On-board computer to save. If you do not save the settings, they will be reset after a restart.

Main screen setup

In the menu section **On-board computer** > **Main screen setup**, you can configure the interface of the main screen of the On-board computer.



Information lines

In the menu **On-board computer** > **Main screen setup** > **Information lines**, information lines on the main screen are configured, the readings of which are toggled with the two central buttons, to the right and left. You can configure up to five lines. One or two parameters can be displayed simultaneously. All lines are configured identically. After making changes, go to the **On-board computer** > **Save** and save settings.

#Line 1 — #Line 5. Selecting a line number, if you specify only one parameter for a line, then only one value will be shown on the main screen.

Left var. — variable on the left side of the line.

Right var. — variable on the right side of the line.

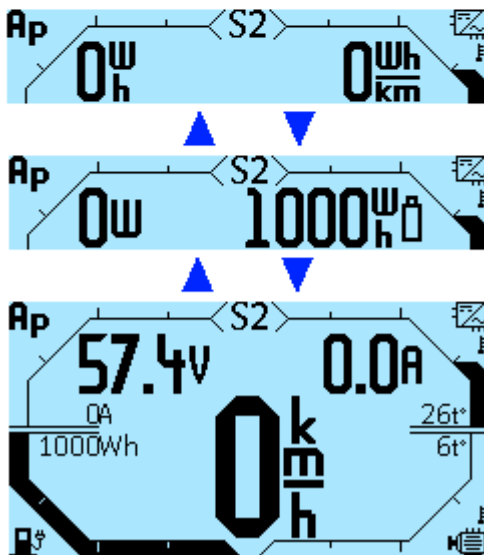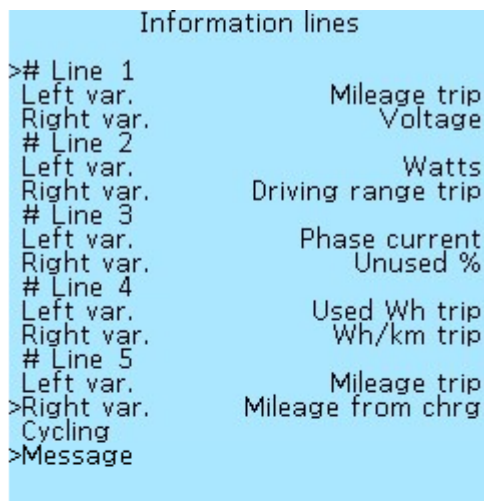

List of parameters available for display:

Nothing — parameter is not displayed.

Voltage — battery voltage, Volts (**V**).

Current — battery current, Amperes (**A**).

Phase current — phase current, Amperes (**A**).

Watts — electric motor power, Watts (**W**).

Unused Wh — remaining battery capacity, Watt-hours (**Wh**).

Used Wh trip — energy consumption per trip, Watt-hours (**Wh**).

Used Wh total — energy consumption of all time, Watt-hours (**Wh**).

Used Wh user — energy consumption per user period of time (reset at will), Watt-hours (**Wh**).

Used Wh from chrg — energy consumption since charging, Watt-hours (**Wh**).

Unused % — remaining battery charge in percent, (%)

Wh/km trip — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**) if you set up a **Speed unit** in mph.

Wh/km total — energy consumption per kilometer of all time, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Wh/km total user — energy consumption for a user-defined period of time per kilometer (reset at will), Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Wh/km from chrg — energy consumption per kilometer since charging, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Mileage trip — mileage per trip, Kilometers (**km**) or Miles (**mi**).

Mileage total — mileage of all time, Kilometers (**km**) or Miles (**mi**).

Mileage user — mileage for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

Mileage from chrg — mileage since charging, Kilometers (**km**) or Miles (**mi**).

Driving range trip — driving range per trip, Kilometers (**km**) or Miles (**mi**).

Driving range tota — driving range of all time, Kilometers (**km**) or Miles (**mi**).

Driving range user — driving range for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

Driving range from chrg — driving range since charging, Kilometers (**km**) or Miles (**mi**).

Mid Speed trip — average speed per trip, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed total — average speed of all time, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed user — average speed for a user-defined period of time (reset at will), Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed from chrg — average speed since charging, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Motor t°C — motor temperature, degrees Celsius (°C).

Controller t°C — controller temperature, degrees Celsius (°C).

Motor RPM — motor revolutions per minute (**RPM**)

In the menu **On-board computer > Main screen setup > Information lines > Cycling** you can set up automatic scrolling of information lines on the main screen in the specified range.


Cycling		
>Switch mode	Manual	You can choose one of the following Switch mode for switching
Cycle start	# Line 1	information lines:
Cycle end	# Line 1	Manual — without automatic scrolling, manual switching using
Cycle time	0	the buttons on the On-board computer.
		Auto range — automatic scrolling in the range of lines.
		All auto — automatic scrolling of all information lines.
		Cycle start — from which line will scroll, values from # Line 1 to

Line 5.

Cycle end — to which line will scroll, values from # **Line 1** to # **Line 5**.

Cycle time — time period of automatic scrolling of all values in seconds, values from **1** sec to **255** sec, in **1-sec** increments.

In the menu **On board computer > Main screen setup > Information lines > Message** you can enable or disable pop-up messages by their priority. This functionality has not yet been implemented.

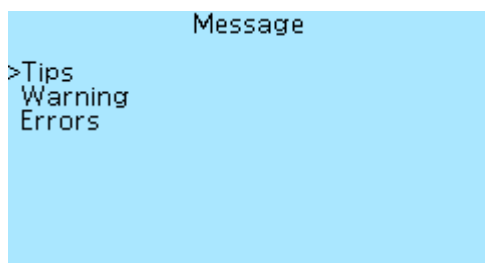


Speed unit

In the menu **On-board computer** > **Main screen setup** > **Speed unit**, you can select the units of measure for speed, in kilometers per hour (**km_h**) or in miles per hour (**mph**). After making changes, you must go to the **On-board computer** > **Save** and save settings.

Temperature graphs

For temperature graphs, you can configure the display limits, through the parameters in the section **On-board computer** > **Main screen setup**. If several controllers are connected, the highest temperature of the motor or controller will be displayed. After making changes, you must go to the **On-board computer** > **Save** and save settings.

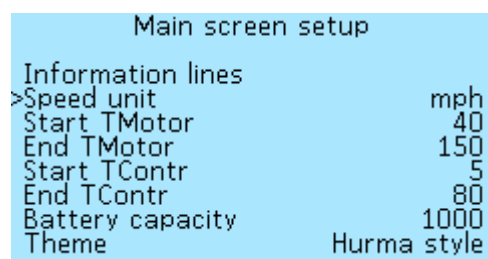

Start TMotor — minimum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

End TMotor — maximum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

Start TContr — minimum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

End TContr — maximum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

Battery capacity

In the menu **On-board computer** > **Main screen setup** > **Battery capacity** configures the display of the battery capacity on the Main screen. After making changes, you must go to the **On-board computer** > **Save** and save settings.

```

Main screen setup
Information lines
Speed unit          mph
Start TMotor        40
End TMotor          150
Start TContr        5
End TContr          80
>Battery capacity    1000
Theme               Hurma style


```

Battery capacity — the energy stored by the battery, in Watt-hours (W*h), the values from **5 W*h** to **10000 W*h**, with increments of **5 W*h**.


Main screen theme

In the menu **On-board computer** > **Main screen setup** > **Theme**, you can choose a theme for the main screen interface. At the moment, there are three themes available, suggested by users — VasiliSk, Vitz, Hurma. After choosing a theme, you must go to the **On-board computer** > **Save** and save settings.


VasiliSk

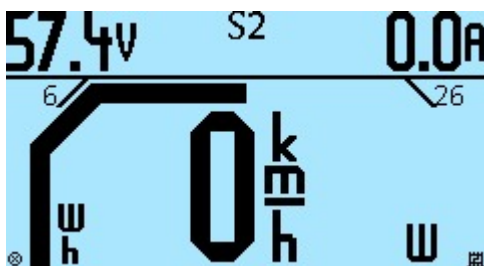

Vitz

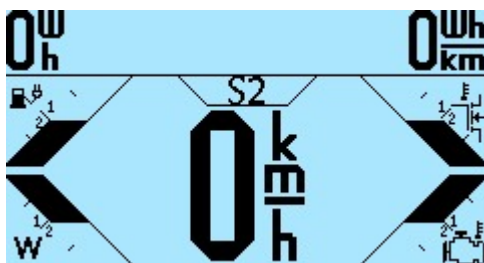


Hurma

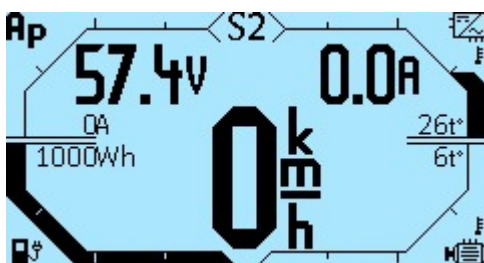

Quick statistics

Menu item **On-board computer** > **Main screen setup** > **Quick statistics**. Quick statistics are displayed on the main screen instead of the speedometer when the speed is zero. By default, quick

statistics is disabled (**Off**).

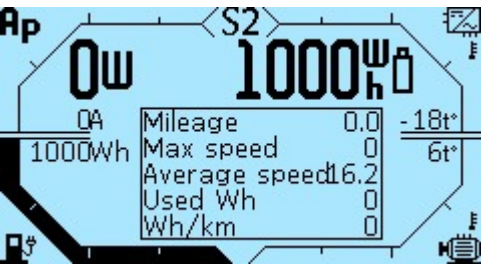

You can choose to display several types of statistics: **General**, **User**, **Trip**, **From charge**. For a detailed description, see the **Statistics** section. The main screen displays five parameters:

- Mileage** — mileage in kilometers (**km**) or in miles (**mi**).
- Max speed** — maximum speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).
- Avg speed** — average speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).
- Used Wh** — energy consumption per trip, Watt-hours (**Wh**).
- Wh\km** — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**).

In the future, will be able to function of change the list of displayed parameters.

After enabling the display of quick statistics, you must go to the **On-board computer > Save** and save settings.

Main screen animation

In the menu **On-board computer > Main screen setup > Demo mode** you can turn on the animation of the status bars on the main screen when starting the On-board computer. Select values **On** and **Off**.

Buttons backlight

In the menu **On-board computer > Button color and brightness**, you can customize the color of the buttons of the On-board computer.

Button color and brightness

>Hue100

Saturation255

Lightness64

Auto bright setup

Hue — adjustment of the button illumination color, values from **0** to **255**, in **1** increments.

Saturation — adjustment the saturation of the button illumination, values from **0** to **255**, in **1** increments.

Lightness — adjustment the brightness of the button illumination, values from **0** to **255**, in **1** increments.

Also in this menu, you can enable automatic adjustment of the brightness of the buttons using the light sensor located on the front panel of the On-board computer. Menu **On-board computer > Button color and brightness > Auto bright setup**.

Button color and brightness

>Auto bright setupOff

Button brightness max.255

Button brightness min.10

Illumination level max.290

Illumination level min.150

Illumination level actual247

Auto bright setup — **Off** (Disabled) and **On** (Enabled). Select **On** to enable.

Button brightness max. — maximum brightness of buttons, values from **0** to **255**, in **1** increments.

Button brightness min. — minimum brightness of buttons, values from **0** to **255**, in **1** increments.

Illumination level max. — maximum lighting level, values from **1** to **300**, in **1** increments.

Illumination level min. — minimum lighting level, values from **1** to **300**, in **1** increments.

Illumination level actual — current lighting level.

Screen backlight

In the menu item **On-board computer > Screen backlight**, you can adjust the brightness of the backlight of the On-board computer screen.

Screen backlight		Backlight — backlight brightness, values from 0 to 255 , in 1 increments.
Backlight	250	
>Auto bright setup		

If desired, you can enable automatic screen brightness adjustment using the light sensor in the menu **On-board computer > Screen backlight > Auto bright setup**.

Auto bright setup		Auto bright setup — Off (Disabled) and On (Enabled). Select On to enable.
>Auto bright setup	Off	
Backlight max.	255	Backlight max. — maximum screen brightness in good lighting conditions, values from 0 to 255 , in 1 increments.
Backlight min.	10	Backlight min. — minimum screen brightness, in low light, values from 0 to 255 , in 1 increments.
Illumination level max.	290	Illumination level max. — value from the light sensor at which the maximum brightness is considered, values from 1 to 300 , in 1 increments.
Illumination level min.	150	Illumination level min. — value from the light sensor at which the minimum brightness is considered, values from 1 to 300 , in 1 increments.
Illumination level actual	247	Illumination level actual — shows the current value from the light sensor.

the maximum brightness is considered, values from **1** to **300**, in **1** increments.

Illumination level min. — value from the light sensor at which the minimum brightness is considered, values from **1** to **300**, in **1** increments.

Illumination level actual — shows the current value from the light sensor.

We recommend that you first adjust the min/max light level by closing the light sensor with your finger. Then you can adjust the brightness of the backlight. Optimal values for night/day brightness are 30/255. The light sensor must be configured individually because a wide range of readings is possible.

Buttons setup

Menu **On-board computer > Buttons** setup menu allows you to configure the functions of the On-board computer buttons or external control buttons, switches, ignition key connected to the On-board computer. See the diagram in the **Connection** section.

Buttons setup		
>Hot key 1 type	Button	
Hot key 1 func.	CAN Button1	
Hot key 2 type	Button	
Hot key 2 func.	CAN Button2	
Hot key 3 type	Button	
Hot key 3 func.	CAN Button3	
Hot key 4 type	Button	
Hot key 4 func.	Nothing	
Input 1 type	Switch	
Input 1 func.	CAN Button8	
Input 2 type	Switch	
Input 2 func.	CAN Button9	
Input 3 type	Switch	
Input 3 func.	CAN Button10	
>Input 4 type	Switch	
Input 4 func.	CAN Button11	
Input 5 type	Switch	
Input 5 func.	CAN Button12	
Input 6 type	Switch	
Input 6 func.	CAN Button13	
Input 7 type	Switch	
>Input 7 func.	CAN Button14	
Input 8 type	Switch	
Input 8 func.	CAN Button15	
Button top	Nothing	
Button middle	Nothing	
Button bottom	Nothing	
>Latch filter	1	

Menu items **Hot key 1 — Hot key 4** — four buttons of the On-board computer, from left to right, are configured in the same way. The function assigned to them is activated by pressing and holding the button for 2 seconds. After setting, you need to save the parameters in the menu section **Onboard computer > Save**.

In the items **Hotkey 1 type — Hotkey 4 type** you can select the type of control signal that goes to the Controller. Value options:

None — turned off.

Button — select, if necessary, that the Controller, when pressing and releasing the button, receives the “on” signal. When pressed and released again - signal “off”.

Switch — select, if necessary, that the Controller, when the toggle switch is turned on, receives the “on” signal, when the toggle switch is turned off, the “off” signal. For example, if you want to switch on one of the speed modes on the Controller with a button from the On-board computer. Also, the value **Switch** must be selected if you connect the brake levers with normally open contacts (NO).

Switch_inv — inverted switch state. This value must be selected

when connecting brake levers with normally closed contacts (NC).

In menu items **Hot key 1 func. — Hot key 4 func.** selects the function assigned to the On-Board Computer button.

Nothing — function turned off.

USB Charger — function of turning on and off USB charging by pressing and holding the On-board computer button. You can also enable charging forcibly in the **Settings** menu. See **USB Charging Setup** section above.

CAN Button 1 — CAN Button 16 — selection of the CAN-input number when controlling via the CAN-bus. These are software values, there are fewer physical inputs on the boards, at the moment there are eight CAN-ports **IO1-IO8** available in the On-board computer (see [diagram](#)).

Menu items **Input 1 — Input 8** — numbers of inputs **IO1-IO8** in the On-board computer. On the back of the On-board computer there is a panel with connectors, where you can connect control buttons and customize their functions. All inputs are configured in the same way. See section **Connection**. To see which input number the button has, go to the **On-board computer > Information menu**, press the button, and see for which input number the value **0** changes to **1**. See the **Information** section.

In menu items **Input 1 type — Input 8 type** you can select the type of control signal, which is sent to the controller from the inputs **IO1-IO8**, respectively. The options for choosing values are similar to the **Hotkey 1 type** setting — **None, Button, Switch, Switch_inv**.

In the menu items **Input 1 func. — Input 8 func.** selects the function assigned to the button connected to the On-Board computer. The value selection options are similar to **Hotkey 1 type — Nothing, USB Charger, CAN Button 1-CAN Button 16**.

Button top, Button middle, Button bottom — setting the functions of a three-button control panel. The connection diagram will be available later. The options for selecting values are similar to the setting **Hot key 1 type — Nothing, USB Charger, CAN Button 1-CAN Button 16**.

In the menu item **On-board computer > Button setup > Latch filter**, you can configure a filter for more stable button operation. The choice of values from 0 to 10. This setting refers to the four

buttons of the On-board computer **Hotkey 1-Hotkey 4**. Sometimes, especially if the functions are configured for all four buttons, interference may occur that will affect the stability of the buttons. In this case, you can increase the filter value. The button will turn on more slowly (it will need to be held longer), but more stable.

Screen contrast setup

Menu item **On-board computer > Contrast**. Selecting the contrast level of the On-board computer screen, values from **30** to **100**, in **1** increments. After setting the contrast level, save the settings in the **On-board computer > Save menu**.

Data sources setup

In the menu section **Onboard computer > Data sources** are configured data sources for various indicators of the Onboard computer.

Data sources		
Speed source	Controller	Speed source — selection of speed data source Controller or Display .
Current source	Controller	Current source — selection of the current source data
Battery voltage source	BMS	Controller or BMS .
>Source W/H used.	BMS	Battery voltage source — selection of the battery voltage data source Controller or BMS .
Wheel circumference	2100	Source W/H used. — select the source of the battery power consumption data Controller or BMS .
		Wheel circumference — wheel circumference in millimeters, values from 100 to 3000 , in 1 increments. This setting is used when selecting an external sensor connected to the On-board computer as a speed source.

The On-board computer supports two ways to determine the speed:

- according to information from the Controller.
- by a speed sensor (reed switch), which is connected to the On-board computer.

If you select the Controller value, the controller readings will be used as the speed data source. This method is suitable for direct-drive or mid-drive motors without overrunning clutch. After selecting the value Controller, you must:

1. Specify the number of pole pairs for the magnets in the menu **Controller > Motor setup > Pole pair**. The number of pole pairs for different models of motors can be found in the **Motor Information** section. If your motor is not on the list, check with the manufacturer or use an Internet search.

50: Motor setup	
Motor t°-sensor	
Clutch	
Manual angle setup	
Hall table	
>Pole pair	23
Spin direction	Forward
Integration thr.	50.000V
Control mode now	Sensorless

2. Enable speed calculation (if disabled) in the **Controller > Extra parameters > Speed calculation** and specify the wheel circumference in millimeters in the **Controller > Extra parameters > Circumference**. You can use the [online calculator](#) to calculate the circumference.

50: Extra parameters	
Disable button	None
Auto shutdown	Off
Sleep time	300 s
Lock at turn-on	Off
>Speed calculation	On
Circumference	1930 mm
Motor sprocket	10 t
Wheel sprocket	10 t

If selecting a value **Display** the speed will be determined from an external sensor, which is used, for example, in a bicycle computer. The speed sensor must be connected according to the diagram to the **SPEED** connector on the rear panel of the On-board computer. After setting the Display value and connecting the speed sensor, you must specify the wheel circumference in millimeters in the **On-board computer > Data source menu**.

Display heating

In the menu section **On-board computer > LCD heater**, you can turn on the screen heating of the On-board computer. This function is used to correctly display information on the screen in cold weather or when the screen fogs up. Consumption approximately **6W**. Heating works automatically, when the specified temperature is reached, the heating is turned off, when the temperature drops, it turns on again.


LCD heater	
>LCD heater	Off
Heating Temp	40

LCD heater — selecting **Off** (Disabled) and **On** (Enabled).

Heating Temp — selection of temperature values in degrees Celsius (°C) from **0°C** to **60°C**, in **1°C** increments.

Password setup

In the menu section **On-board computer > Security** you can set a password that will be requested when turning on the Controller. Without entering the password, the controller will not respond to controls.

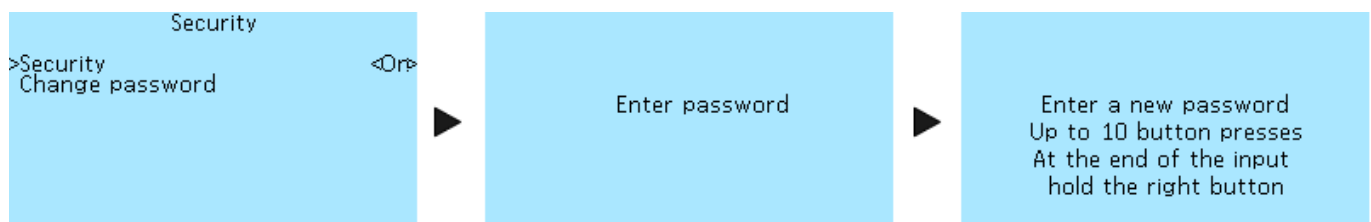

Security — enabling the password request function when starting the controller. Select **Off** and **On**.

Change password — changing the default password.

To set your password, select **On** from the **Security** menu section. Next, go to the menu item **Change password**, you will be asked to enter a password. Enter the default password 1234 by pressing the On-board computer buttons from left to right. Enter a new password, you can assign up to 10 keystrokes. For example, 10 clicks on button 1 or 5 clicks on button 2 and 5 on button 3. After entering the new password, press and hold the right button. Re-enter the new password. Save the settings in the menu **On-board computer > Save** to save the new password.

Attention! There is no way to recover a forgotten password on your own. Later, the function of recovering the password by the controller serial number will be added.

Firmware update

In the menu item **On-board computer > Update software** you can update the firmware of the On-board computer. You can download the latest firmware version in the [Firmware](#) section.

```

Update software
Search SD      OK
File search    OK
File check     OK
File size:     133860
Update?

```

To update, download the firmware file to the root directory of the microSD card with Fat/Fat32 file system. Insert the card, with the contacts on top, into the connector on the On-board Computer. This can be done without turning off the On-board computer, but in this case, you must exit the **Update software** menu and re-enter. After that, the On-board computer will detect the microSD card, display the **File size** in bytes and the menu item **Update?**

Press the right button of the On-board computer to start the update. After restarting, check the firmware version under **On-board Computer > Device Information**.

Reset settings

In the menu section **On-board computer > Reset settings**, you can reset all settings to the factory settings. To reset, press the right button of the On-board computer.

Device information

In the menu section **On-board computer > Device info**, you can view basic data on the On-board computer. In this menu you can check what version of the firmware is loaded into your On-board computer.

```

Device info
Device name   Nucular Display
HW version    H12.B00
HW data       Jan 16 2019
SW version    0.60B
SW data       Aug 31 2020

```

Nucular Display — device name.

HW version — hardware version.

HW data — date of hardware production.

SW version — firmware version, you can download the latest firmware in the [Firmware](#) section.

SW data — firmware compilation date.

On-board computer (v.0.7B). Under construction

The On-board computer is equipped with a large sunlight resistant screen to display main parameters, driving modes settings, software updates for all system components, battery control, and the charging state of the devices via USB. On the left side of the On-board computer there is a slot for a microSD card, which is used to update the firmware, save screenshots, import and export configurations and settings of the On-board computer and Controller. On the back of the On-board computer there is a power button, which is [configured](#) in the menu **Devices > Controller > Extra parameters > Disable button**.

Technical specifications:

- LCD size 3.6"
- FSTN, monochrome
- Screen resolution 240×128 px
- Screen heating
- RGB-button backlight
- MicroSD slot
- USB-charger 5.2V 2A
- Password protection
- Multi-Language (English, Russian)
- IP65 class

In the kit:


- GoPro fork mount.
- USB charging wire.
- PHD 2.0 4P connector — 4 pcs.
- PHD 2.0 6P connector — 1 pcs.
- PHD 2.0 8P connector — 1 pcs.
- Pins for crimping — 26 pcs.
- If you don't have a crimping tool, you need to order "Crimped wires for the Display".

Connection diagram

You can look at the connection diagrams for other devices at this [link](#). By default, all control devices (thumb throttle, brake levers, switches, etc.) are connected to the ports located on the back of the On-Board Computer. To access, you need to unscrew five screws and remove the plastic cover. For connection, PHD 2.0 connectors and crimp pins are used, which are included in the kit. If you do not have a crimping wire tool, for example, SN-2549, then you need to order "Crimped wires for Display". The On-board computer is connected to the Controller with one CAN-wire 1.2 meters length, which is included in the Controller kit. Note, the CAN-wire from the Controller should be connected to the **SYSTEM** port on the On-Board Computer.


If you want to connect control devices directly to the Controller, you need to order "Controller-side inputs", in the diagram at the link above this switching option is designated as "Alternative

connection". You can also use a mixed connection option, for example, connect the thumb throttle to the On-board computer, and the brake levers to the Controller.

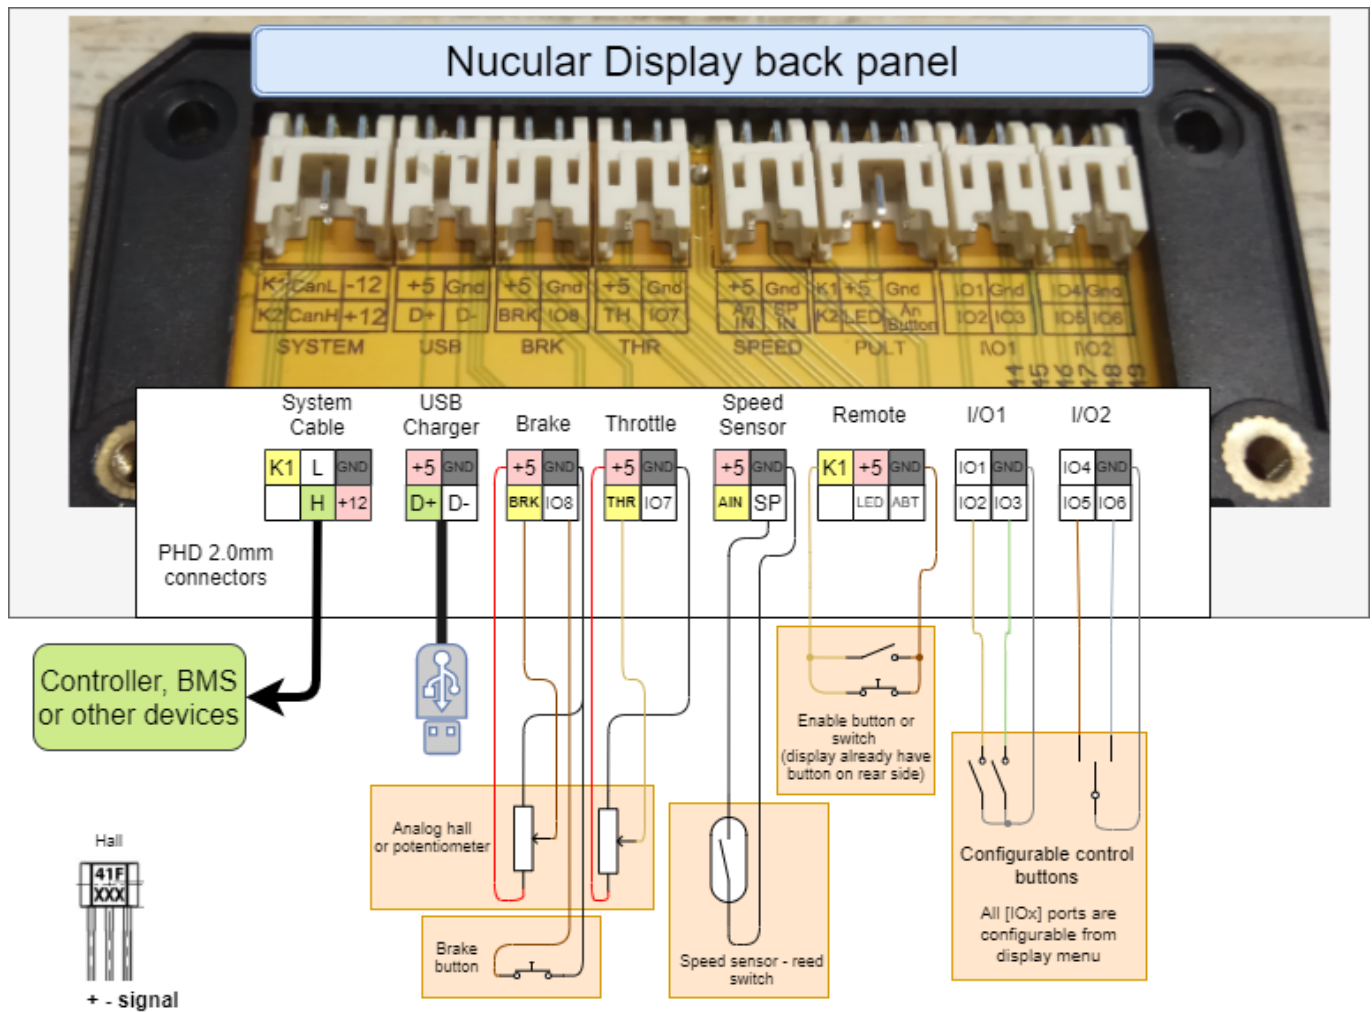

The main screen overview

The screenshot below is one of the Main screen configurations. The layout of the elements on the screen depends on the theme and settings. In this example, the Hurma theme is installed.

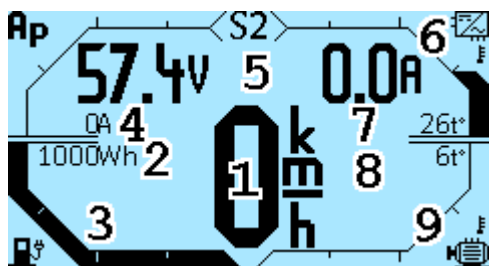


- Controller temperature.
- Motor temperature.
- Motor temperature bar.

Menu navigation

Navigation on the On-board computer screen is carried out by the four bottom buttons. By holding down the two central buttons, you can take a screenshot of the screen, the file will be saved in .bmp format on the microSD card (if it is inserted into the On-board computer). Functions of the On-board computer buttons, from left to right:

- Switch the menu screen, cancel, return to the previous menu
- Switch up, less
- Switch down, more
- Select, apply

The picture below shows the menu navigation diagram, the red arrow is the left button, the blue arrows are the two central buttons, the green arrow is the right button of the Onboard computer.

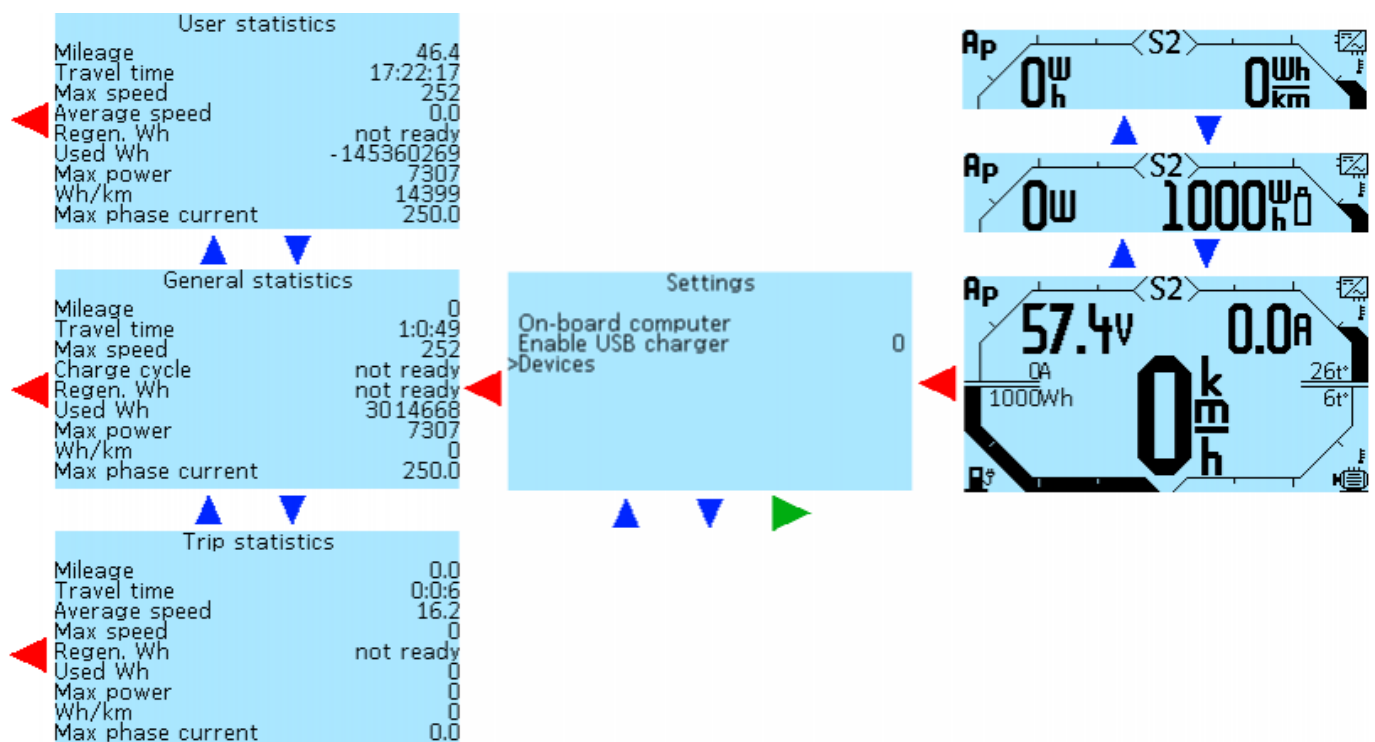

Statistics

To go from the main screen to the statistics section, double-click the left button of the On-board computer. Then, with the second and third buttons, you can switch screens with statistics **General statistics** > **User statistics** > **Trip statistics** > **From charge statistics**.

General statistics	
Mileage	0
Travel time	1:0:49
Max speed	252
Charge cycle	not ready
Regen. Wh	not ready
Used Wh	3014668
Max power	7307
Wh/km	0
Max phase current	250.0

There are four types of statistics available:

General statistics — statistics for all time of using the Controller and On-Board Computer.

User statistics — statistics for any time period you choose. You can reset the data when you need it.

Trip statistics — statistics since the Controller was turned on.

From charge statistics — statistics between battery charges.

User statistics	
Mileage	46.4
Travel time	17:22:17
Max speed	252
Average speed	0.0
Regen. Wh	not ready
Used Wh	-145360269
Max power	7307
Wh/km	14399
Max phase current	250.0

Trip statistics	
Mileage	0.0
Travel time	0:0:6
Average speed	16.2
Max speed	0
Regen. Wh	not ready
Used Wh	0
Max power	0
Wh/km	0
Max phase current	0.0

From charge statistics	
Mileage	0
Travel time	0:9:37
Max speed	0
Average speed	0.0
Regen. Wh	0
Used Wh	0
Max power	0
Wh/mi	0
Max phase current	0.0

The list of parameters that are displayed for each type of statistics are the same and are calculated based on the type of statistics, with the exception of the **Charge Cycles** in the General statistics, instead of this item, in all other types of statistics is displayed the **Average speed** indicator, which is calculated while driving.

Mileage — mileage in kilometers or miles (depending on settings).

Travel time — driving time, hours, minutes, seconds.

Max speed — maximum speed, km/h or mph (depending on settings).

Charge cycle — number of battery charging cycles (for General statistics only).

Average speed — average speed, km/h or mph (depending on settings).

Regen Wh — the amount of energy returned to the battery during regenerative braking, in watt-hours (Wh).

Used Wh — the amount of energy consumed, watt-hours (W*h).

Max power — maximum power, watts (W).

Wh/km (Wh/mi) — the amount of consumed watt-hours of the battery per kilometer (or per mile) of run, (Wh/km or Wh/mi).

Max phase current — maximum phase current, amperes (A).

Statistics reset:

General — go to the **General statistics** screen, press and hold the left button of the On-board computer, the system will ask for a password, enter the default password or your custom password. For more information on setting up a password, read the Password setup section. After entering the password, the statistics will be reset. If you do not enter the password, then you can return to the main menu only after restarting the On-board computer. You can do this either by deactivating or using the button on the back of the Trip Computer, provided that you have configured it in the section **Devices > Controller > Extra parameters > Disable button**.

User — go to the **User statistics** screen, press and hold the left button of the On-board computer, the statistics will be reset.

Trip — statistics are reset automatically after controller shutdown.

From charge — statistics are reset automatically after full battery charging.

Menu and settings overview

Pressing the left button on the On-board Computer on the Main screen will take you to the **Settings** menu.

On-board computer — setting the parameters and functions of the On-board computer.

Enable USB charger — enable USB

charging, see below for setting description.

Devices — list of all connected devices and transition to the menu of each of them for setting.

USB charger setup

A USB cable for charging your gadgets is included in the kit and plugs into the USB port on the rear panel of the On-Board Computer. To enable charging, go to **Settings > Enable USB charger**, press the right button to select, and then change the value from **0** to **1** with the third button. Then press the right button to save the value and turn on USB charging. If you want the USB charging to be always active when the On-Board Computer is switched on, go to On-Board Computer > Save and save this setting. If this is not done, then when the On-Board Computer is turned on again, the USB charging will be disabled

Buttons setup	
Hot key 1 type	Button
>Hot key 1 func.	USB Charger
Hot key 2 type	Button
Hot key 2 func.	CAN Button2
Hot key 3 type	Button
Hot key 3 func.	CAN Button3
Hot key 4 type	Button
Hot key 4 func.	Nothing

You can also configure the activation of charging by pressing and holding one of the buttons on the On-Board Computer (Hot key). To configure this function, go to **On-board computer > Buttons setup**, select which button you want to enable charging. Next, select the **Latching** in **Hot key type** and the USB Charge in **Hot key func**. In the screenshot, we made such a setting for the first button of the On-board computer (Hot key 1). After setting, go to

the **On-board computer** > **Save** and save. Done. USB charging can now be turned on/off by pressing and holding the first button of the On-Board Computer when the main screen is displayed.

Information

The menu section **Onboard computer** > **Information** displays data from all sensors and devices connected to the Onboard computer.

Supply V 12.12	ACC Z 0	Supply V — CAN bus supply voltage, Volts (V).
Int +5V 5.17	Comp t 39	Int V — internal power supply and USB-output voltage, Volts (V).
Light V 2.36	Input 1 func. 0	Light V — light sensor voltage, volts (V).
ThrottleV 0.00	Input 2 func. 0	Throttle V — throttle handle voltage, Volts (V).
Brake V 0.00	Input 3 func. 0	Brake V — brake handle voltage, Volts (V).
ACC X 0	Input 4 func. 0	ACC X — accelerometer readings X-axis.
ACC Y 0	Input 5 func. 0	ACC Y — accelerometer readings Y-axis.
		ACC Z — accelerometer readings Z-axis.
		Comp t — On-board computer processor temperature, degrees Celsius (°C).
Input 6 func. 0		I01 state — input I01 of the I/O1 port on the rear panel of the Onboard computer (see the diagram in the Connection section), the value changes from 0 to 1 when the button connected to the Onboard computer is pressed, see the Buttons setup section, the other inputs have are the same values
Input 7 func. 0		I02 state — input I02 of the I/O1 port.
Input 8 func. 0		
CAN_OVR 0		
CAN_LEC 3		
CAN_TEC 128		
CAN_REC 0		

▼

I03 state — input **I03** of the **I/O1** port.

I04 state — input **I04** of the **I/O2** port.

I05 state — input **I05** of the **I/O2** port.

I06 state — input **I06** of the **I/O2** port.

I07 state — input **I07** of the **THR (Throttle)** port.

I08 state — input **I08** of the **BRK (Brake)** port.

CAN_OVR — CAN bus error.

CAN_LEC — CAN bus error.

CAN_TEC — CAN bus error.

CAN_REC — CAN bus error.

Settings saving

All made settings can be saved in the menu **On-board computer** > **Save**. Press the right button of the On-board computer to save. If you do not save the settings, they will be reset after a restart.

Buttons backlight

In the menu **On-board computer** > **On-board computer settings** > **Button color and brightness**, you can customize the color of the buttons of the On-board computer.

Button color and brightness

```
>Hue          100
Saturation    255
Lightness     64
Auto bright setup
```

Hue — adjustment of the button illumination color, values from **0** to **255**, in **1** increments.

Saturation — adjustment the saturation of the button illumination, values from **0** to **255**, in **1** increments.

Lightness — adjustment the brightness of the button illumination, values from **0** to **255**, in **1** increments.

Also in this menu, you can enable automatic adjustment of the brightness of the buttons using the light sensor located on the front panel of the On-board computer. Menu **On-board computer > On-board computer settings > Button color and brightness > Auto bright setup**.

Button color and brightness

```
>Auto bright setup    Off
Button brightness max. 255
Button brightness min. 10
Illumination level max. 290
Illumination level min. 150
Illumination level actual 247
```

Auto bright setup — **Off** (Disabled) and **On** (Enabled). Select **On** to enable.

Button brightness max. — maximum brightness of buttons, values from **0** to **255**, in **1** increments.

Button brightness min. — minimum brightness of buttons, values from **0** to **255**, in **1** increments.

Illumination level max. — maximum lighting level, values from

1 to **300**, in **1** increments.

Illumination level min. — minimum lighting level, values from **1** to **300**, in **1** increments.

Illumination level actual — current lighting level.

Screen backlight

In the menu item **On-board computer > On-board computer settings > Screen backlight**, you can adjust the brightness of the backlight of the On-board computer screen.

Screen backlight

```
Backlight      250
>Auto bright setup
```

Backlight — backlight brightness, values from **0** to **255**, in **1** increments.

If desired, you can enable automatic screen brightness adjustment using the light sensor in the menu **On-board computer > On-board computer settings > Screen backlight > Auto bright setup**.

Auto bright setup

```
>Auto bright setup    Off
Backlight max.        255
Backlight min.        10
Illumination level max. 290
Illumination level min. 150
Illumination level actual 247
```

Auto bright setup — **Off** (Disabled) and **On** (Enabled). Select **On** to enable.

Backlight max. — maximum screen brightness in good lighting conditions, values from **0** to **255**, in **1** increments.

Backlight min. — minimum screen brightness, in low light, values from **0** to **255**, in **1** increments.

Illumination level max. — value from the light sensor at which the maximum brightness is considered, values from **1** to **300**, in **1** increments.

Illumination level min. — value from the light sensor at which the minimum brightness is considered, values from **1** to **300**, in **1** increments.

Illumination level actual — shows the current value from the light sensor.

We recommend that you first adjust the min/max light level by closing the light sensor with your finger. Then you can adjust the brightness of the backlight. Optimal values for night/day brightness are 30/255. The light sensor must be configured individually because a wide range of readings is possible.


Screen contrast setup

Menu item **On-board computer > On-board computer settings > Contrast**. Selecting the contrast level of the On-board computer screen, values from **30** to **100**, in **1** increments. After setting the contrast level, save the settings in the **On-board computer > Save menu**.

Display heating

In the menu section **On-board computer > On-board computer settings > LCD heater**, you can turn on the screen heating of the On-board computer. This function is used to correctly display information on the screen in cold weather or when the screen fogs up. Consumption approximately **6W**. Heating works automatically, when the specified temperature is reached, the heating is turned off, when the temperature drops, it turns on again.

LCD heater — selecting **Off** (Disabled) and **On** (Enabled).
Heating Temp — selection of temperature values in degrees Celsius (°C) from **0°C** to **60°C**, in **1°C** increments.

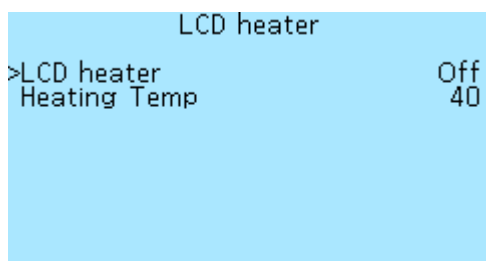

Main screen setup

In the menu section **On-board computer > Main screen setup**, you can configure the interface of the main screen of the On-board computer.

Information lines

In the menu **On-board computer > Main screen setup > Information lines**, information lines on the main screen are configured, the readings of which are toggled with the two central buttons, to the right and left. You can configure up to five lines. One or two parameters can be displayed simultaneously. All lines are configured identically. After making changes, go to the **On-board computer > Save** and save settings.


#Line 1 — #Line 5. Selecting a line number, if you specify only one parameter for a line, then only

one value will be shown on the main screen.

Left var. — variable on the left side of the line.

Right var. — variable on the right side of the line.

Information lines		
># Line 1		
Left var.	Mileage trip	
Right var.	Voltage	
# Line 2		
Left var.	Watts	
Right var.	Driving range trip	
# Line 3		
Left var.	Phase current	
Right var.	Unused %	
# Line 4		
Left var.	Used Wh trip	
Right var.	Wh/km trip	
# Line 5		
Left var.	Mileage trip	
>Right var.	Mileage from chrg	
Cycling		
>Message		

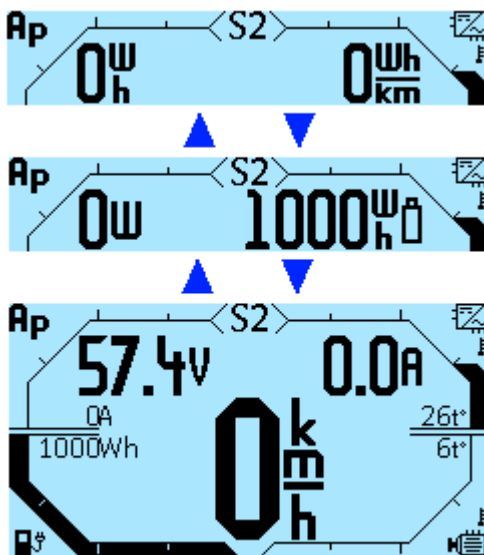

List of parameters available for display:

Nothing — parameter is not displayed.

Voltage — battery voltage, Volts (**V**).

Current — battery current, Amperes (**A**).

Phase current — phase current, Amperes (**A**).

Watts — electric motor power, Watts (**W**).

Unused Wh — remaining battery capacity, Watt-hours (**Wh**).

Used Wh trip — energy consumption per trip, Watt-hours (**Wh**).

Used Wh total — energy consumption of all time, Watt-hours (**Wh**).

Used Wh user — energy consumption per user period of time (reset at will), Watt-hours (**Wh**).

Used Wh from chrg — energy consumption since charging, Watt-hours (**Wh**).

Unused % — remaining battery charge in percent, (%)

Wh/km trip — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**) if you set up a **Speed unit** in mph.

Wh/km total — energy consumption per kilometer of all time, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Wh/km total user — energy consumption for a user-defined period of time per kilometer (reset at

will), Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Wh/km from chrg — energy consumption per kilometer since charging, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

Mileage trip — mileage per trip, Kilometers (**km**) or Miles (**mi**).

Mileage total — mileage of all time, Kilometers (**km**) or Miles (**mi**).

Mileage user — mileage for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

Mileage from chrg — mileage since charging, Kilometers (**km**) or Miles (**mi**).

Driving range trip — driving range per trip, Kilometers (**km**) or Miles (**mi**).

Driving range tota — driving range of all time, Kilometers (**km**) or Miles (**mi**).

Driving range user — driving range for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

Driving range from chrg — driving range since charging, Kilometers (**km**) or Miles (**mi**).

Mid Speed trip — average speed per trip, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed total — average speed of all time, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed user — average speed for a user-defined period of time (reset at will), Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Mid Speed from chrg — average speed since charging, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

Motor t°C — motor temperature, degrees Celsius (°C).

Controller t°C — controller temperature, degrees Celsius (°C).

Motor RPM — motor revolutions per minute (**RPM**)

In the menu **On-board computer > Main screen setup > Information lines > Cycling** you can set up automatic scrolling of information lines on the main screen in the specified range.

<p style="text-align: center;">Cycling</p> <pre>>Switch mode Cycle start Cycle end Cycle time</pre>	<pre>Manual # Line 1 # Line 1 0</pre>	<p>You can choose one of the following Switch mode for switching information lines:</p> <p>Manual — without automatic scrolling, manual switching using the buttons on the On-board computer.</p> <p>Auto range — automatic scrolling in the range of lines.</p> <p>All auto — automatic scrolling of all information lines.</p> <p>Cycle start — from which line will scroll, values from # Line 1 to</p>
--	---------------------------------------	--

Line 5.

Cycle end — to which line will scroll, values from **# Line 1** to **# Line 5**.

Cycle time — time period of automatic scrolling of all values in seconds, values from **1** sec to **255** sec, in **1-sec** increments.

In the menu **On board computer > Main screen setup > Information lines > Message** you can enable or disable pop-up messages by their priority. This functionality has not yet been implemented.

<p style="text-align: center;">Message</p> <pre>>Tips Warning Errors</pre>

Speed unit

In the menu **On-board computer** > **Main screen setup** > **Speed unit**, you can select the units of measure for speed, in kilometers per hour (**km_h**) or in miles per hour (**mph**). After making changes, you must go to the **On-board computer** > **Save** and save settings.

Temperature graphs

For temperature graphs, you can configure the display limits, through the parameters in the section **On-board computer** > **Main screen setup**. If several controllers are connected, the highest temperature of the motor or controller will be displayed. After making changes, you must go to the **On-board computer** > **Save** and save settings.

Main screen setup	
Information lines	
>Speed unit	mph
Start TMotor	40
End TMotor	150
Start TContr	5
End TContr	80
Battery capacity	1000
Theme	Hurma style

Start TMotor — minimum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

End TMotor — maximum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

Start TContr — minimum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

End TContr — maximum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

Battery capacity

In the menu **On-board computer** > **Main screen setup** > **Battery capacity** configures the display of the battery capacity on the Main screen. After making changes, you must go to the **On-board computer** > **Save** and save settings.

Main screen setup	
Information lines	
Speed unit	mph
Start TMotor	40
End TMotor	150
Start TContr	5
End TContr	80
>Battery capacity	1000
Theme	Hurma style


Battery capacity — the energy stored by the battery, in Watt-hours (W*h), the values from **5 W*h** to **10000 W*h**, with increments of **5 W*h**.

Main screen theme


In the menu **On-board computer** > **Main screen setup** > **Theme**, you can choose a theme for the main screen interface. At the moment, there are three themes available, suggested by users — VasiliSk, Vitz, Hurma. After choosing a theme, you must go to the **On-board computer** > **Save** and

save settings.


VasiliSk

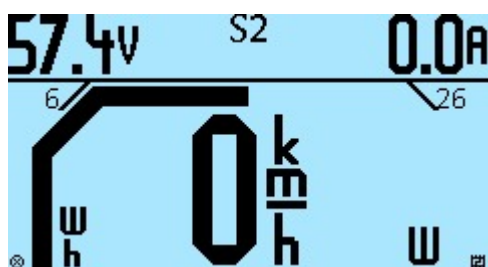

Vitz

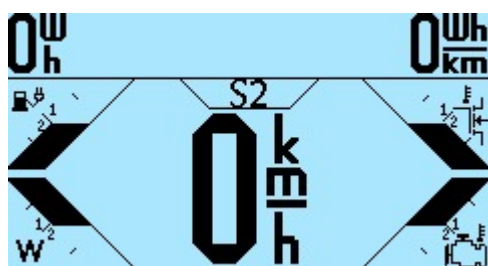


Hurma

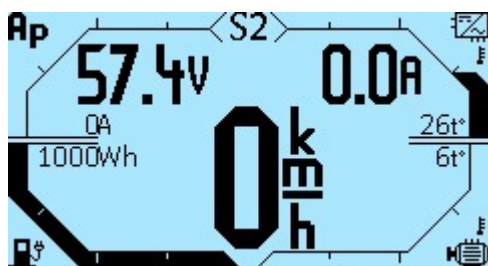

Quick statistics

Menu item **On-board computer** > **Main screen setup** > **Quick statistics**. Quick statistics are displayed on the main screen instead of the speedometer when the speed is zero. By default, quick statistics is disabled (**Off**).

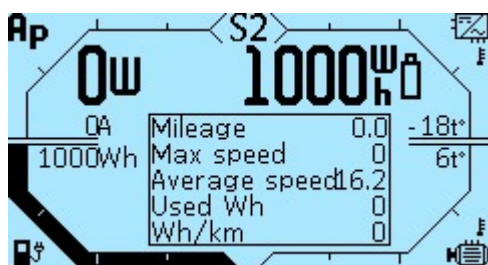

You can choose to display several types of statistics: **General**, **User**, **Trip**, **From charge**. For a detailed description, see the **Statistics** section. The main screen displays five parameters:

- Mileage** — mileage in kilometers (**km**) or in miles (**mi**).
- Max speed** — maximum speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).
- Avg speed** — average speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).

miles per hour (**mph**).

Used Wh — energy consumption per trip, Watt-hours (**Wh**).

Wh\km — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**).

In the future, will be able to function of change the list of displayed parameters.

After enabling the display of quick statistics, you must go to the **On-board computer** > **Save** and save settings.

Main screen animation

In the menu **On-board computer** > **Main screen setup** > **Demo mode** you can turn on the animation of the status bars on the main screen when starting the On-board computer. Select values **On** and **Off**.

Buttons setup

Menu **On-board computer** > **Buttons setup** menu allows you to configure the functions of the On-board computer buttons or external control buttons, switches, ignition key connected to the On-board computer. See the diagram in the **Connection** section.

Buttons setup		
>Hot key 1 type	Button	Button1
Hot key 1 func.	CAN	Button1
Hot key 2 type	Button	Button2
Hot key 2 func.	CAN	Button2
Hot key 3 type	Button	Button3
Hot key 3 func.	CAN	Button3
Hot key 4 type	Button	Nothing
Hot key 4 func.	Nothing	Nothing
Input 1 type	Switch	Button8
Input 1 func.	CAN	Button8
Input 2 type	Switch	Button9
Input 2 func.	CAN	Button9
Input 3 type	Switch	Button10
Input 3 func.	CAN	Button10
>Input 4 type	Switch	Button11
Input 4 func.	CAN	Button11
Input 5 type	Switch	Button12
Input 5 func.	CAN	Button12
Input 6 type	Switch	Button13
Input 6 func.	CAN	Button13
Input 7 type	Switch	Button14
>Input 7 func.	CAN	Button14
Input 8 type	Switch	Button15
Input 8 func.	CAN	Button15
Button top	Nothing	Nothing
Button middle	Nothing	Nothing
Button bottom	Nothing	Nothing
>Latch filter	1	1

Menu items **Hot key 1** — **Hot key 4** — four buttons of the On-board computer, from left to right, are configured in the same way. The function assigned to them is activated by pressing and holding the button for 2 seconds. After setting, you need to save the parameters in the menu section **Onboard computer** > **Save**.

In the items **Hotkey 1 type** — **Hotkey 4 type** you can select the type of control signal that goes to the Controller. Value options: **None** — turned off.

Latching — select, if necessary, that the Controller, when pressing and releasing the button, receives the “on” signal. When pressed and released again - signal “off”.

Normal — select, if necessary, that the Controller, when the toggle switch is turned on, receives the “on” signal, when the toggle switch is turned off, the “off” signal. For example, if you want to switch on one of the speed modes on the Controller with a button from the On-board computer. Also, the value **Switch** must be selected if you connect the brake levers with normally open contacts (NO).

Inverted — inverted switch state. This value must be selected when connecting brake levers with normally closed contacts (NC).

In menu items **Hot key 1 func.** — **Hot key 4 func.** selects the function assigned to the On-Board Computer button.

Nothing — function turned off.

USB Charger — the function of turning on and off USB charging by pressing and holding the On-board computer button. You can also enable charging forcibly in the **Settings** menu. See **USB Charging Setup** section above.

Security block — enabling a password during charging, so that you cannot change any settings while the battery is charging through the motor.

Turn off screen backlight - turn off the screen backlight with one button, for example, when charging.

CAN_1 — **CAN_16** — selection of the CAN-input number when controlling via the CAN-bus. These are software values, there are fewer physical inputs on the boards, at the moment there are eight CAN-ports **IO1-IO8** available in the On-board computer (see [diagram](#)).

Menu items **IO1** — **IO8** — numbers of inputs **IO1-IO8** in the On-board computer. On the back of the

On-board computer there is a panel with connectors, where you can connect control buttons and customize their functions. All inputs are configured in the same way. See section **Connection**. To see which input number the button has, go to the **On-board computer > Information menu**, press the button, and see for which input number the value **0** changes to **1**. See the **Information** section.

In menu items **IO1 — IO8** you can select the type of control signal, which is sent to the controller from the inputs **IO1-IO8**, respectively. The options for choosing values are similar to the **Hotkey 1 type** setting — **None, Latching, Normal, Inverted**.

In the menu items **Input 1 func. — Input 8 func.** selects the function assigned to the button connected to the On-Board computer. The value selection options are similar to **Hotkey 1 type — Nothing, USB Charger, Security block, Turn off screen backlight, CAN_1-CAN_16**.

The **Hot key charge mode** menu item allows you to customize the functionality of the On-board computer buttons in charging mode, which allows you to use the same button to activate different functions while driving and while charging. The settings are similar to the **Hotkey 1 type-Hotkey 4 type** menu items and **Hotkey 1 func.-Hotkey 4 func.**.

Button top, Button middle, Button bottom — setting the functions of a three-button control panel. The connection diagram will be available later. The options for selecting values are similar to the setting **Hot key 1 type — Nothing, USB Charger, Security block, Turn off screen backlight, CAN_1-CAN_16**.

In the menu item **On-board computer > Button setup > Latch filter**, you can configure a filter for more stable button operation. The choice of values from 0 to 10. This setting refers to the four buttons of the On-board computer **Hotkey 1-Hotkey 4**. Sometimes, especially if the functions are configured for all four buttons, interference may occur that will affect the stability of the buttons. In this case, you can increase the filter value. The button will turn on more slowly (it will need to be held longer), but more stable.

The **Onboard computer > Button setup > Short press hot key** menu item allows you to configure the activation of the function by short pressing the On-board computer buttons, without holding it for 2 seconds.

Настройка управления

В разделе меню **Бортовой компьютер > Настройка управления** настраиваются параметры ручек газа и тормоза, подключенных напрямую в Бортовой компьютер. Если ручки газа и тормоза подключены к Контроллеру через провода управления, то их настройку необходимо делать в [разделе](#) меню **Контроллер > Управление**.

Настройка управления	
ThrottleV	0.00V
Ручка газа V max	4.30V
Ручка газа V min	1.00V
Brake V	0.78V
Ручка тормоза V m.	4.30V
Ручка тормоза V mi.	1.00V
Ручка газа автонастройка	
Ручка тормоза автонастройка	

ThrottleV — текущее напряжение ручки газа, подключенной к Бортовому компьютеру, в вольтах (**V**).

Ручка газа V max и **Ручка газа V min** — диапазон работы ручки газа, в вольтах (**V**), выбор значений от **0.01V** до **5.00V**, с шагом **0.01V**. При превышении максимального значения на 5% будет включена защита от сломанной ручки газа. Если у вас неправильно выставлен диапазон, то при полном

нажатии ручки газа будет выключаться электродвигатель, в данном случае необходимо увеличить значение диапазона.

BrakeV — текущее напряжение ручки тормоза, подключенной к Бортовому компьютеру, в вольтах (**V**).

Ручка тормоза V max и **Ручка тормоза V min** — диапазон работы ручки тормоза, в вольтах (**V**), выбор значений от **0.01V** до **5.00V**, с шагом **0.01V**.

Ручка газа автонастройка — режим автоматической настройки диапазона ручки газа. Для запуска режима нажмите правую кнопку Бортового компьютера и следуйте инструкциям на экране.

Ручка тормоза автонастройка — режим автоматической настройки диапазона ручки тормоза. Для запуска режима нажмите правую кнопку Бортового компьютера и следуйте инструкциям на экране.

Data sources setup

In the menu section **Onboard computer** > **Data sources** are configured data sources for various indicators of the Onboard computer.

```

Data sources
Speed source      Controller
Current source    Controller
Battery voltage source BMS
>Source W/H used. BMS
Wheel circumference 2100
  
```

Speed source — selection of speed data source **Controller** or **Display**.

Current source — selection of the current source data **Controller** or **BMS**.

Battery voltage source — selection of the battery voltage data source **Controller** or **BMS**.

Source W/H used. — select the source of the battery power consumption data **Controller** or **BMS**.

Wheel circumference — wheel circumference in millimeters, values from **100** to **3000**, in **1** increments. This setting is used when selecting an external sensor connected to the On-board computer as a speed source.

The On-board computer supports two ways to determine the speed:

- according to information from the Controller.
- by a speed sensor (reed switch), which is connected to the On-board computer.

If you select the Controller value, the controller readings will be used as the speed data source. This method is suitable for direct-drive or mid-drive motors without overrunning clutch. After selecting the value Controller, you must:

1. Specify the number of pole pairs for the magnets in the menu **Controller** > **Motor setup** > **Pole pair**. The number of pole pairs for different models of motors can be found in the **Motor Information** section. If your motor is not on the list, check with the manufacturer or use an Internet search.

```

50: Motor setup
Motor t°-sensor
Clutch
Manual angle setup
Hall table
>Pole pair          23
Spin direction      Forward
Integration thr.    50.000V
Control mode now    Sensorless
  
```


2. Enable speed calculation (if disabled) in the **Controller > Extra parameters > Speed calculation** and specify the wheel circumference in millimeters in the **Controller > Extra parameters > Circumference**. You can use the [online calculator](#) to calculate the circumference.

50: Extra parameters	
Disable button	None
Auto shutdown	Off
Sleep time	300 s
Lock at turn-on	Off
>Speed calculation	On
Circumference	1930 mm
Motor sprocket	10 t
Wheel sprocket	10 t

If selecting a value **Display** the speed will be determined from an external sensor, which is used, for example, in a bicycle computer. The speed sensor must be connected according to the diagram to the **SPEED** connector on the rear panel of the On-board computer. After setting the Display value and connecting the speed sensor, you must specify the wheel circumference in millimeters in the **On-board computer > Data source menu**.

Password setup

In the menu section **On-board computer > Security** you can set a password that will be requested when turning on the Controller. Without entering the password, the controller will not respond to controls.

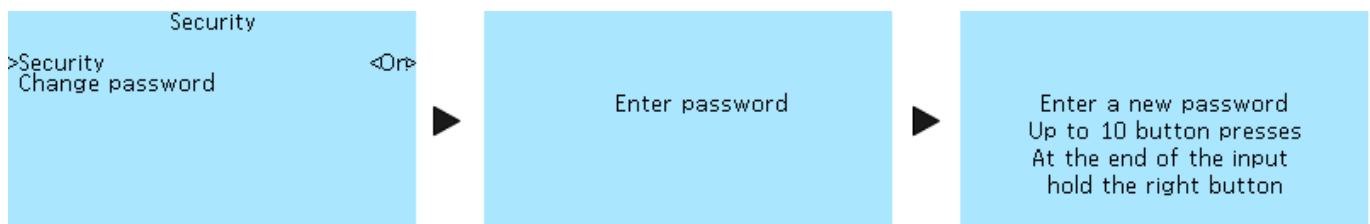

Security — enabling the password request function when starting the controller. Select **Off** and **On**.
Change password — changing the default password.

To set your password, select **On** from the **Security** menu section. Next, go to the menu item **Change password**, you will be asked to enter a password. Enter the default password 1234 by pressing the On-board computer buttons from left to right. Enter a new password, you can assign up to 10 keystrokes. For example, 10 clicks on button 1 or 5 clicks on button 2 and 5 on button 3. After entering the new password, press and hold the right button. Re-enter the new password. Save the settings in the menu **On-board computer > Save** to save the new password.

Attention! There is no way to recover a forgotten password on your own. Later, the function of recovering the password by the controller serial number will be added.

Firmware update

In the menu item **On-board computer > Update software** you can update the firmware of the On-board computer. You can download the latest firmware version in the [Firmware](#) section.

```

Update software
Search SD      OK
File search    OK
File check     OK
File size;     133860
Update?

```

To update, download the firmware file to the root directory of the microSD card with Fat/Fat32 file system. Insert the card, with the contacts on top, into the connector on the On-board Computer. This can be done without turning off the On-board computer, but in this case, you must exit the **Update software** menu and re-enter. After that, the On-board computer will detect the microSD card, display the **File size** in bytes and the menu item **Update?**

Press the right button of the On-board computer to start the update. After restarting, check the firmware version under **On-board Computer > Device Information**.

Reset settings

In the menu section **On-board computer > Reset settings**, you can reset all settings to the factory settings. To reset, press the right button of the On-board computer.

Device information

In the menu section **On-board computer > Device info**, you can view basic data on the On-board computer. In this menu you can check what version of the firmware is loaded into your On-board computer.

```

Device info
Device name   Nucular Display
HW version    H12.800
HW data       Jan 16 2019
SW version    0.608
SW data       Aug 31 2020

```

Nucular Display — device name.

HW version — hardware version.

HW data — date of hardware production.

SW version — firmware version, you can download the latest firmware in the [Firmware](#) section.

SW data — firmware compilation date.

From:

<https://docs.nucular.tech/> - **Nucular Electronics**

Permanent link:

<https://docs.nucular.tech/doku.php?id=en:display:start&rev=1633961647>

Last update: **2021/10/11 16:14**