

# Important!

Before reading the instructions, check which firmware is installed in your On-board computer in the menu section **On-board computer** > **Device info** menu item **SW version**.

- [Instructions for firmware up to v0.6B inclusive](#).
- [Instructions for firmware v0.7B or higher](#).

## On-board computer (v.0.6B)

The On-board computer is equipped with a large sunlight resistant screen to display main parameters, driving modes settings, software updates for all system components, battery control, and the charging state of the devices via USB. On the left side of the On-board computer there is a slot for a microSD card, which is used to update the firmware, save screenshots, import and export configurations and settings of the On-board computer and Controller. On the back of the On-board computer there is a power button, which is [configured](#) in the menu **Devices** > **Controller** > **Extra parameters** > **Disable button**.

*Technical specifications:*

- LCD size 3.6"
- FSTN, monochrome
- Screen resolution 240×128 px
- Screen heating
- RGB-button backlight
- MicroSD slot
- USB-charger 5.2V 2A
- Password protection
- Multi-Language (English, Russian)
- IP65 class

*In the kit:*


- GoPro fork mount.
- USB charging wire.
- PHD 2.0 4P connector — 4 pcs.
- PHD 2.0 6P connector — 1 pcs.
- PHD 2.0 8P connector — 1 pcs.
- Pins for crimping — 26 pcs.
- If you don't have a crimping tool, you need to order "Crimped wires for the Display".

## Connection diagram

You can look at the connection diagrams for other devices at this [link](#). By default, all control devices (thumb throttle, brake levers, switches, etc.) are connected to the ports located on the back of the On-Board Computer. To access, you need to unscrew five screws and remove the plastic cover. For

connection, PHD 2.0 connectors and crimp pins are used, which are included in the kit. If you do not have a crimping wire tool, for example, SN-2549, then you need to order "Crimped wires for Display". The On-board computer is connected to the Controller with one CAN-wire 1.2 meters length, which is included in the Controller kit. Note, the CAN-wire from the Controller should be connected to the **SYSTEM** port on the On-Board Computer.

If you want to connect control devices directly to the Controller, you need to order "Controller-side inputs", in the diagram at the link above this switching option is designated as "Alternative connection". You can also use a mixed connection option, for example, connect the thumb throttle to the On-board computer, and the brake levers to the Controller.

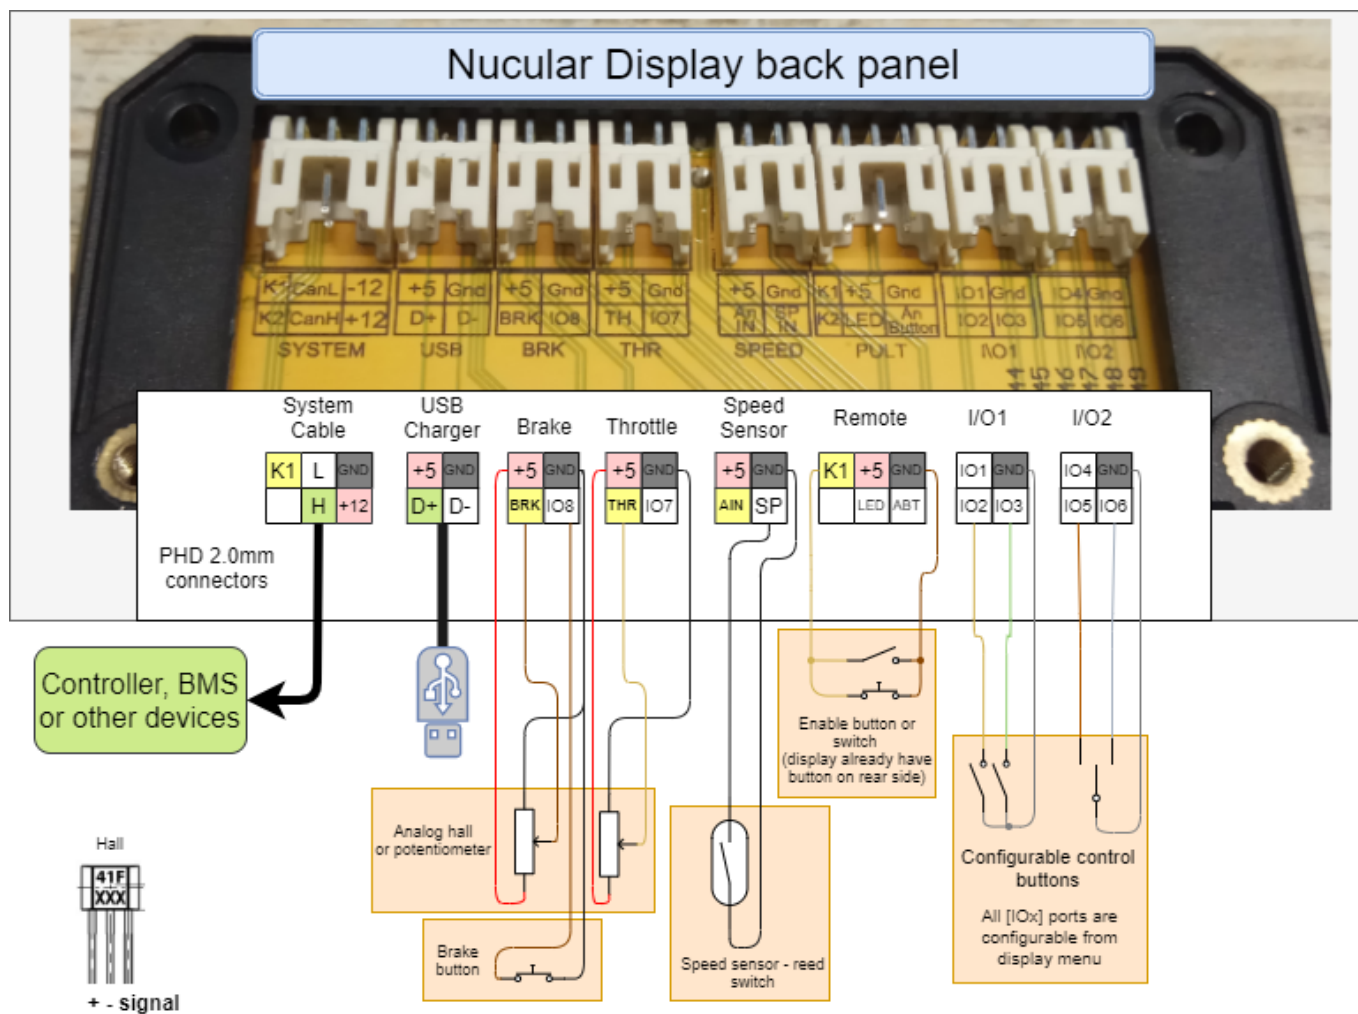

## The main screen overview

The screenshot below is one of the Main screen configurations. The layout of the elements on the screen depends on the theme and settings. In this example, the Hurma theme is installed.

The screenshot shows the main screen configuration with the following elements:

- 1. Speedometer or fast statistics, when the speed is zero.
- 2. Battery charge Wh.
- 3. Battery charge bar.
- 4. Phase current.
- 5. Information line, the content of which is changed by up and down keys. The default is Voltage and Battery Current.
- 6. Controller temperature bar.

The screen displays the following data:

- Speed: 0 km/h
- Battery Voltage: 57.4V
- Battery Current: 0.0A
- Phase Current: 4.0A
- Battery Charge: 1000Wh
- Temperature: 26°C


- 7. Controller temperature.
- 8. Motor temperature.
- 9. Motor temperature bar.

## Menu navigation

Navigation on the On-board computer screen is carried out by the four bottom buttons. By holding down the two central buttons, you can take a screenshot of the screen, the file will be saved in .bmp format on the microSD card (if it is inserted into the On-board computer). Functions of the On-board computer buttons, from left to right:

- Switch the menu screen, cancel, return to the previous menu
- Switch up, less
- Switch down, more
- Select, apply

The picture below shows the menu navigation diagram, the red arrow is the left button, the blue arrows are the two central buttons, the green arrow is the right button of the Onboard computer.

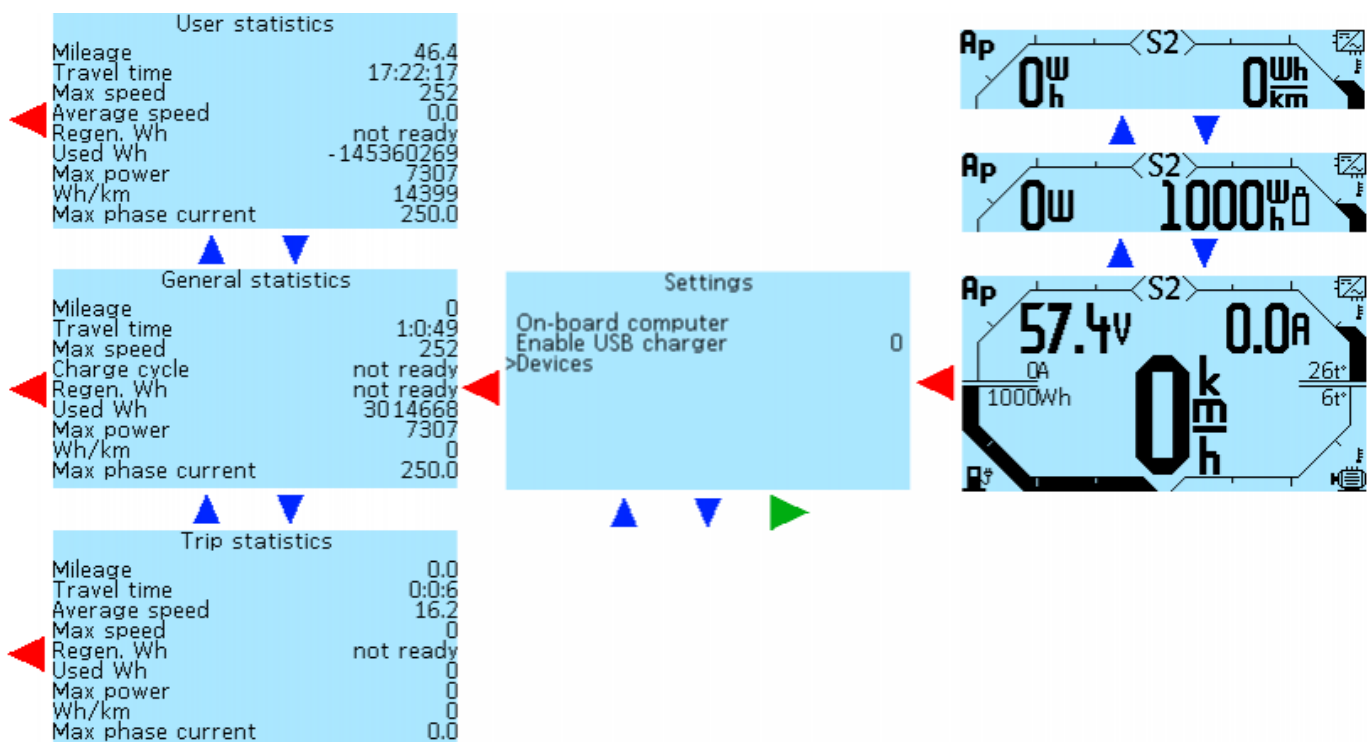

## Statistics

To go from the main screen to the statistics section, double-click the left button of the On-board computer. Then, with the second and third buttons, you can switch screens with statistics **General statistics** > **User statistics** > **Trip statistics** > **From charge statistics**.

General statistics	
Mileage	0
Travel time	1:0:49
Max speed	252
Charge cycle	not ready
Regen. Wh	not ready
Used Wh	3014668
Max power	7307
Wh/km	0
Max phase current	250.0

There are four types of statistics available:

**General statistics** — statistics for all time of using the Controller and On-Board Computer.

**User statistics** — statistics for any time period you choose. You can reset the data when you need it.

**Trip statistics** — statistics since the Controller was turned on.

**From charge statistics** — statistics between battery charges.

User statistics	
Mileage	46.4
Travel time	17:22:17
Max speed	252
Average speed	0.0
Regen. Wh	not ready
Used Wh	-145360269
Max power	7307
Wh/km	14399
Max phase current	250.0

Trip statistics	
Mileage	0.0
Travel time	0:0:6
Average speed	16.2
Max speed	0
Regen. Wh	not ready
Used Wh	0
Max power	0
Wh/km	0
Max phase current	0.0

From charge statistics	
Mileage	0
Travel time	0:9:37
Max speed	0
Average speed	0.0
Regen. Wh	0
Used Wh	0
Max power	0
Wh/mi	0
Max phase current	0.0

The list of parameters that are displayed for each type of statistics are the same and are calculated based on the type of statistics, with the exception of the **Charge Cycles** in the General statistics, instead of this item, in all other types of statistics is displayed the **Average speed** indicator, which is calculated while driving.

- Mileage** — mileage in kilometers or miles (depending on settings).
- Travel time** — driving time, hours, minutes, seconds.
- Max speed** — maximum speed, km/h or mph (depending on settings).
- Charge cycle** — number of battery charging cycles (for General statistics only).
- Average speed** — average speed, km/h or mph (depending on settings).
- Regen Wh** — the amount of energy returned to the battery during regenerative braking, in watt-hours (Wh).
- Used Wh** — the amount of energy consumed, watt-hours (W\*h).
- Max power** — maximum power, watts (W).
- Wh/km (Wh/mi)** — the amount of consumed watt-hours of the battery per kilometer (or per mile) of run, (Wh/km or Wh/mi).
- Max phase current** — maximum phase current, amperes (A).

**Statistics reset:**

**General** — go to the **General statistics** screen, press and hold the left button of the On-board computer, the system will ask for a password, enter the default password or your custom password. For more information on setting up a password, read the Password setup section. After entering the password, the statistics will be reset. If you do not enter the password, then you can return to the main menu only after restarting the On-board computer. You can do this either by deactivating or using the button on the back of the Trip Computer, provided that you have configured it in the section **Devices > Controller > Extra parameters > Disable button**.



**User** — go to the **User statistics** screen, press and hold the left button of the On-board computer, the statistics will be reset.

**Trip** — statistics are reset automatically after controller shutdown.

**From charge** — statistics are reset automatically after full battery charging.

## Menu and settings overview

Pressing the left button on the On-board Computer on the Main screen will take you to the **Settings** menu.

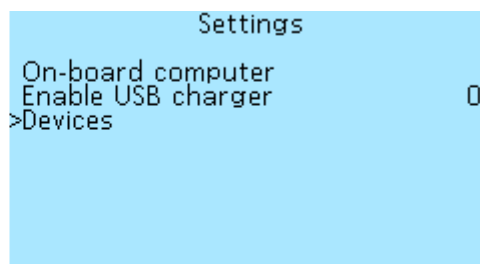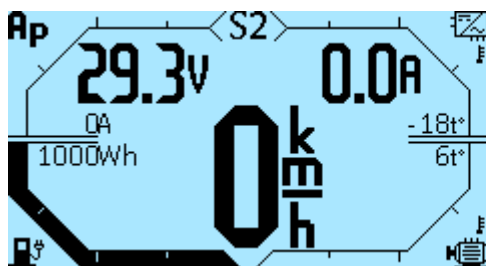


**On-board computer** — setting the parameters and functions of the On-board computer.  
**Enable USB charger** — enable USB

charging, see below for setting description.

**Devices** — list of all connected devices and transition to the menu of each of them for setting.

## USB charger setup

A USB cable for charging your gadgets is included in the kit and plugs into the USB port on the rear panel of the On-Board Computer. To enable charging, go to **Settings > Enable USB charger**, press the right button to select, and then change the value from **0** to **1** with the third button. Then press the right button to save the value and turn on USB charging. If you want the USB charging to be always active when the On-Board Computer is switched on, go to On-Board Computer > Save and save this setting. If this is not done, then when the On-Board Computer is turned on again, the USB charging will be disabled

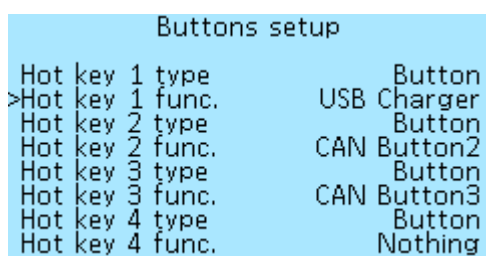

You can also configure the activation of charging by pressing and holding one of the buttons on the On-Board Computer (Hot key). To configure this function, go to **On-board computer > Buttons setup**, select which button you want to enable charging. Next, select the **Button** in **Hot key type** and the USB Charge in **Hot key func.** In the screenshot, we made such a setting for the first button of the On-board computer (Hot key 1). After setting, go to

the **On-board computer** > **Save** and save. Done. USB charging can now be turned on/off by pressing and holding the first button of the On-Board Computer when the main screen is displayed.

### Information

The menu section **Onboard computer** > **Information** displays data from all sensors and devices connected to the Onboard computer.

Supply V 12.12	ACC Z 0	<b>Supply V</b> — CAN bus supply voltage, Volts ( <b>V</b> ).
Int +5V 5.17	Comp t 39	<b>Int V</b> — internal power supply and USB-output voltage, Volts ( <b>V</b> ).
Light V 2.36	Input 1 func. 0	<b>Light V</b> — light sensor voltage, volts ( <b>V</b> ).
ThrottleV 0.00	Input 2 func. 0	<b>Throttle V</b> — throttle handle voltage, Volts ( <b>V</b> ).
Brake V 0.00	Input 3 func. 0	<b>Brake V</b> — brake handle voltage, Volts ( <b>V</b> ).
ACC X 0	Input 4 func. 0	<b>ACC X</b> — accelerometer readings X-axis.
ACC Y 0	Input 5 func. 0	<b>ACC Y</b> — accelerometer readings Y-axis.
		<b>ACC Z</b> — accelerometer readings Z-axis.
		<b>Comp t</b> — On-board computer processor temperature, degrees Celsius (°C).
		<b>Input 1 func.</b> — input <b>IO1</b> of the <b>I/O1</b> port on the rear panel of the Onboard computer (see the diagram in the <b>Connection</b> section), the value changes from <b>0</b> to <b>1</b> when the button connected to the Onboard computer is pressed, see the <b>Buttons setup</b> section, the other inputs have are the same values
		<b>Input 2 func.</b> — input <b>IO2</b> of the <b>I/O1</b> port.

- Input 3 func.** — input **IO3** of the **I/O1** port.
- Input 4 func.** — input **IO4** of the **I/O2** port.
- Input 5 func.** — input **IO5** of the **I/O2** port.
- Input 6 func.** — input **IO6** of the **I/O2** port.
- Input 7 func.** — input **IO7** of the **THR (Throttle)** port.
- Input 8 func.** — input **IO8** of the **BRK (Brake)** port.
- CAN\_OVR** — CAN bus error.
- CAN\_LEC** — CAN bus error.
- CAN\_TEC** — CAN bus error.
- CAN\_REC** — CAN bus error.

### Settings saving

All made settings can be saved in the menu **On-board computer** > **Save**. Press the right button of the On-board computer to save. If you do not save the settings, they will be reset after a restart.

### Main screen setup

In the menu section **On-board computer** > **Main screen setup**, you can configure the interface of the main screen of the On-board computer.



## Information lines

In the menu **On-board computer** > **Main screen setup** > **Information lines**, information lines on the main screen are configured, the readings of which are toggled with the two central buttons, to the right and left. You can configure up to five lines. One or two parameters can be displayed simultaneously. All lines are configured identically. After making changes, go to the **On-board computer** > **Save** and save settings.

**#Line 1 — #Line 5.** Selecting a line number, if you specify only one parameter for a line, then only one value will be shown on the main screen.

**Left var.** — variable on the left side of the line.

**Right var.** — variable on the right side of the line.

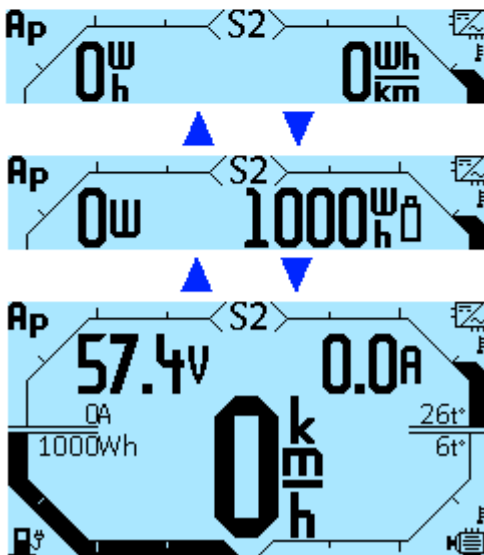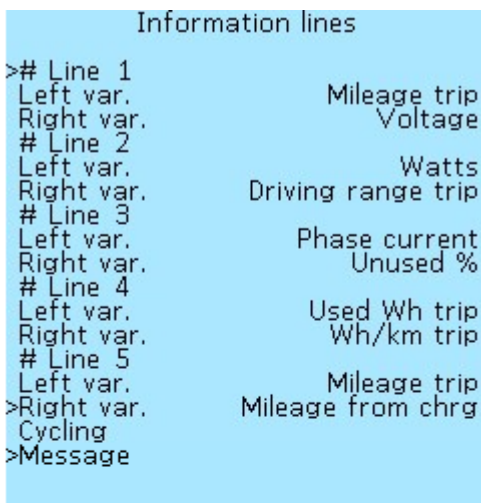

List of parameters available for display:

**Nothing** — parameter is not displayed.

**Voltage** — battery voltage, Volts (**V**).

**Current** — battery current, Amperes (**A**).

**Phase current** — phase current, Amperes (**A**).

**Watts** — electric motor power, Watts (**W**).

**Unused Wh** — remaining battery capacity, Watt-hours (**Wh**).



- Used Wh trip** — energy consumption per trip, Watt-hours (**Wh**).
- Used Wh total** — energy consumption of all time, Watt-hours (**Wh**).
- Used Wh user** — energy consumption per user period of time (reset at will), Watt-hours (**Wh**).
- Used Wh from chrg** — energy consumption since charging, Watt-hours (**Wh**).
- Unused %** — remaining battery charge in percent, (%)
- Wh/km trip** — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**) if you set up a **Speed unit** in mph.
- Wh/km total** — energy consumption per kilometer of all time, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).
- Wh/km total user** — energy consumption for a user-defined period of time per kilometer (reset at will), Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).
- Wh/km from chrg** — energy consumption per kilometer since charging, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).
- Mileage trip** — mileage per trip, Kilometers (**km**) or Miles (**mi**).
- Mileage total** — mileage of all time, Kilometers (**km**) or Miles (**mi**).
- Mileage user** — mileage for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).
- Mileage from chrg** — mileage since charging, Kilometers (**km**) or Miles (**mi**).
- Driving range trip** — driving range per trip, Kilometers (**km**) or Miles (**mi**).
- Driving range tota** — driving range of all time, Kilometers (**km**) or Miles (**mi**).
- Driving range user** — driving range for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).
- Driving range from chrg** — driving range since charging, Kilometers (**km**) or Miles (**mi**).
- Mid Speed trip** — average speed per trip, Kilometers per hour (**km/h**) or Miles per hour (**mph**).
- Mid Speed total** — average speed of all time, Kilometers per hour (**km/h**) or Miles per hour (**mph**).
- Mid Speed user** — average speed for a user-defined period of time (reset at will), Kilometers per hour (**km/h**) or Miles per hour (**mph**).
- Mid Speed from chrg** — average speed since charging, Kilometers per hour (**km/h**) or Miles per hour (**mph**).
- Motor t°C** — motor temperature, degrees Celsius (°C).
- Controller t°C** — controller temperature, degrees Celsius (°C).
- Motor RPM** — motor revolutions per minute (**RPM**)


In the menu **On-board computer > Main screen setup > Information lines > Cycling** you can set up automatic scrolling of information lines on the main screen in the specified range.

<pre style="margin: 0;"> Cycling &gt;Switch mode Cycle start Cycle end Cycle time           </pre>	<pre style="margin: 0;"> Manual # Line 1 # Line 1 0           </pre>	<p>You can choose one of the following <b>Switch mode</b> for switching information lines:</p> <p><b>Manual</b> — without automatic scrolling, manual switching using the buttons on the On-board computer.</p> <p><b>Auto range</b> — automatic scrolling in the range of lines.</p> <p><b>All auto</b> — automatic scrolling of all information lines.</p> <p><b>Cycle start</b> — from which line will scroll, values from <b># Line 1</b> to</p>
--	--	--

- # Line 5.**
- Cycle end** — to which line will scroll, values from **# Line 1** to **# Line 5**.
- Cycle time** — time period of automatic scrolling of all values in seconds, values from **1** sec to **255** sec, in **1-sec** increments.

In the menu **On board computer > Main screen setup > Information lines > Message** you can enable or disable pop-up messages by their priority. This functionality has not yet been implemented.



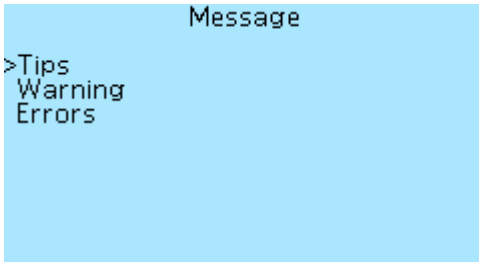


## Speed unit

In the menu **On-board computer** > **Main screen setup** > **Speed unit**, you can select the units of measure for speed, in kilometers per hour (**km\_h**) or in miles per hour (**mph**). After making changes, you must go to the **On-board computer** > **Save** and save settings.

## Temperature graphs

For temperature graphs, you can configure the display limits, through the parameters in the section **On-board computer** > **Main screen setup**. If several controllers are connected, the highest temperature of the motor or controller will be displayed. After making changes, you must go to the **On-board computer** > **Save** and save settings.

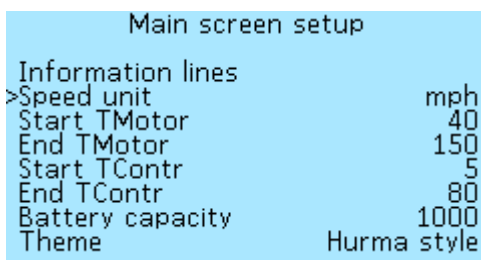

**Start TMotor** — minimum displayed motor temperature in degrees Celsius (**°C**), values from **5°C** to **250°C**, in **5°C** increments.

**End TMotor** — maximum displayed motor temperature in degrees Celsius (**°C**), values from **5°C** to **250°C**, in **5°C** increments.

**Start TContr** — minimum displayed controller temperature in degrees Celsius (**°C**), values from **5°C** to **250°C**, in **5°C** increments.

**End TContr** — maximum displayed controller temperature in degrees Celsius (**°C**), values from **5°C** to **250°C**, in **5°C** increments.

## Battery capacity

In the menu **On-board computer** > **Main screen setup** > **Battery capacity** configures the display of the battery capacity on the Main screen. After making changes, you must go to the **On-board computer** > **Save** and save settings.

```

Main screen setup
Information lines
Speed unit                mph
Start TMotor              40
End TMotor                150
Start TContr              5
End TContr                80
>Battery capacity        1000
Theme                    Hurma style


```

**Battery capacity** — the energy stored by the battery, in Watt-hours (W\*h), the values from **5 W\*h** to **10000 W\*h**, with increments of **5 W\*h**.


## Main screen theme

In the menu **On-board computer** > **Main screen setup** > **Theme**, you can choose a theme for the main screen interface. At the moment, there are three themes available, suggested by users — VasiliSk, Vitz, Hurma. After choosing a theme, you must go to the **On-board computer** > **Save** and save settings.


### VasiliSk

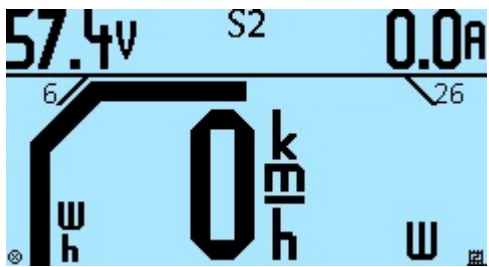

### Vitz

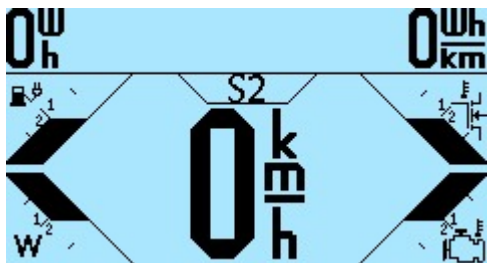


### Hurma

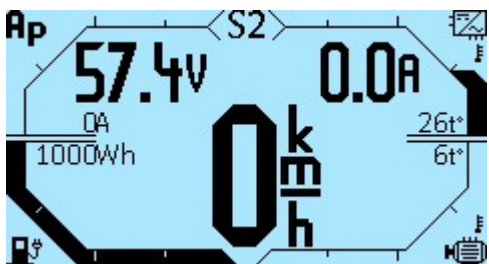

## Quick statistics

Menu item **On-board computer** > **Main screen setup** > **Quick statistics**. Quick statistics are displayed on the main screen instead of the speedometer when the speed is zero. By default, quick

statistics is disabled (**Off**).

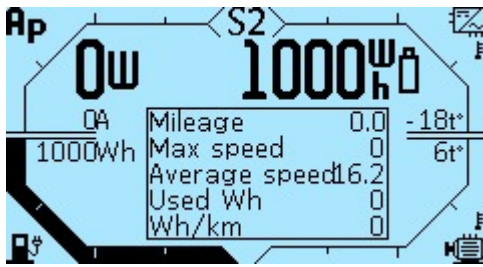

You can choose to display several types of statistics: **General**, **User**, **Trip**, **From charge**. For a detailed description, see the **Statistics** section. The main screen displays five parameters:

- Mileage** — mileage in kilometers (**km**) or in miles (**mi**).
- Max speed** — maximum speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).
- Avg speed** — average speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).

miles per hour (**mph**).

**Used Wh** — energy consumption per trip, Watt-hours (**Wh**).

**Wh\km** — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**).

In the future, will be able to function of change the list of displayed parameters.

After enabling the display of quick statistics, you must go to the **On-board computer** > **Save** and save settings.

## Main screen animation

In the menu **On-board computer** > **Main screen setup** > **Demo mode** you can turn on the animation of the status bars on the main screen when starting the On-board computer. Select values **On** and **Off**.

## Buttons backlight

In the menu **On-board computer** > **Button color and brightness**, you can customize the color of the buttons of the On-board computer.

Button color and brightness		
>Hue	100	<b>Hue</b> — adjustment of the button illumination color, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Saturation	255	<b>Saturation</b> — adjustment the saturation of the button illumination, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Lightness	64	<b>Lightness</b> — adjustment the brightness of the button illumination, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Auto bright setup		

Also in this menu, you can enable automatic adjustment of the brightness of the buttons using the light sensor located on the front panel of the On-board computer. Menu **On-board computer** > **Button color and brightness** > **Auto bright setup**.

Button color and brightness		
>Auto bright setup	Off	<b>Auto bright setup</b> — <b>Off</b> (Disabled) and <b>On</b> (Enabled). Select <b>On</b> to enable.
Button brightness max.	255	<b>Button brightness max.</b> — maximum brightness of buttons, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Button brightness min.	10	<b>Button brightness min.</b> — minimum brightness of buttons, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Illumination level max.	290	<b>Illumination level max.</b> — maximum lighting level, values from <b>1</b> to <b>300</b> , in <b>1</b> increments.
Illumination level min.	150	
Illumination level actual	247	

**Illumination level min.** — minimum lighting level, values from **1** to **300**, in **1** increments.

**Illumination level actual** — current lighting level.

## Screen backlight

In the menu item **On-board computer > Screen backlight**, you can adjust the brightness of the backlight of the On-board computer screen.

<pre>Screen backlight Backlight          250 &gt;Auto bright setup</pre>	<p><b>Backlight</b> — backlight brightness, values from <b>0</b> to <b>255</b>, in <b>1</b> increments.</p>
--	---

If desired, you can enable automatic screen brightness adjustment using the light sensor in the menu **On-board computer > Screen backlight > Auto bright setup**.

<pre>Auto bright setup &gt;Auto bright setup Off Backlight max.      255 Backlight min.      10 Illumination level max. 290 Illumination level min. 150 Illumination level actual 247</pre>	<p><b>Auto bright setup</b> — <b>Off</b> (Disabled) and <b>On</b> (Enabled). Select <b>On</b> to enable.</p> <p><b>Backlight max.</b> — maximum screen brightness in good lighting conditions, values from <b>0</b> to <b>255</b>, in <b>1</b> increments.</p> <p><b>Backlight min.</b> — minimum screen brightness, in low light, values from <b>0</b> to <b>255</b>, in <b>1</b> increments.</p> <p><b>Illumination level max.</b> — value from the light sensor at which the maximum brightness is considered, values from <b>1</b> to <b>300</b>, in <b>1</b> increments.</p> <p><b>Illumination level min.</b> — value from the light sensor at which the minimum brightness is considered, values from <b>1</b> to <b>300</b>, in <b>1</b> increments.</p> <p><b>Illumination level actual</b> — shows the current value from the light sensor.</p>
---	---

the maximum brightness is considered, values from **1** to **300**, in **1** increments.

**Illumination level min.** — value from the light sensor at which the minimum brightness is considered, values from **1** to **300**, in **1** increments.

**Illumination level actual** — shows the current value from the light sensor.

We recommend that you first adjust the min/max light level by closing the light sensor with your finger. Then you can adjust the brightness of the backlight. Optimal values for night/day brightness are 30/255. The light sensor must be configured individually because a wide range of readings is possible.

## Buttons setup

Menu **On-board computer > Buttons** setup menu allows you to configure the functions of the On-board computer buttons or external control buttons, switches, ignition key connected to the On-board computer. See the diagram in the **Connection** section.

Buttons setup	
>Hot key 1 type	Button
Hot key 1 func.	CAN Button1
Hot key 2 type	Button
Hot key 2 func.	CAN Button2
Hot key 3 type	Button
Hot key 3 func.	CAN Button3
Hot key 4 type	Button
Hot key 4 func.	Nothing
Input 1 type	Switch
Input 1 func.	CAN Button8
Input 2 type	Switch
Input 2 func.	CAN Button9
Input 3 type	Switch
Input 3 func.	CAN Button10
>Input 4 type	Switch
Input 4 func.	CAN Button11
Input 5 type	Switch
Input 5 func.	CAN Button12
Input 6 type	Switch
Input 6 func.	CAN Button13
Input 7 type	Switch
>Input 7 func.	CAN Button14
Input 8 type	Switch
Input 8 func.	CAN Button15
Button top	Nothing
Button middle	Nothing
Button bottom	Nothing
>Latch filter	1

Menu items **Hot key 1 — Hot key 4** — four buttons of the On-board computer, from left to right, are configured in the same way. The function assigned to them is activated by pressing and holding the button for 2 seconds. After setting, you need to save the parameters in the menu section **Onboard computer > Save.**

In the items **Hotkey 1 type — Hotkey 4 type** you can select the type of control signal that goes to the Controller. Value options:

**None** — turned off.

**Button** — select, if necessary, that the Controller, when pressing and releasing the button, receives the “on” signal. When pressed and released again - signal “off”.

**Switch** — select, if necessary, that the Controller, when the toggle switch is turned on, receives the “on” signal, when the toggle switch is turned off, the “off” signal. For example, if you want to switch on one of the speed modes on the Controller with a button from the On-board computer. Also, the value **Switch** must be selected if you connect the brake levers with normally open contacts (NO).

**Switch\_inv** — inverted switch state. This value must be selected

when connecting brake levers with normally closed contacts (NC).

In menu items **Hot key 1 func. — Hot key 4 func.** selects the function assigned to the On-Board Computer button.

**Nothing** — function turned off.

**USB Charger** — function of turning on and off USB charging by pressing and holding the On-board computer button. You can also enable charging forcibly in the **Settings** menu. See **USB Charging Setup** section above.

**CAN Button 1 — CAN Button 16** — selection of the CAN-input number when controlling via the CAN-bus. These are software values, there are fewer physical inputs on the boards, at the moment there are eight CAN-ports **IO1-IO8** available in the On-board computer (see [diagram](#)).

Menu items **Input 1 — Input 8** — numbers of inputs **IO1-IO8** in the On-board computer. On the back of the On-board computer there is a panel with connectors, where you can connect control buttons and customize their functions. All inputs are configured in the same way. See section **Connection**. To see which input number the button has, go to the **On-board computer > Information menu**, press the button, and see for which input number the value **0** changes to **1**. See the **Information** section.

In menu items **Input 1 type — Input 8 type** you can select the type of control signal, which is sent to the controller from the inputs **IO1-IO8**, respectively. The options for choosing values are similar to the **Hotkey 1 type** setting — **None, Button, Switch, Switch\_inv**.

In the menu items **Input 1 func. — Input 8 func.** selects the function assigned to the button connected to the On-Board computer. The value selection options are similar to **Hotkey 1 type — Nothing, USB Charger, CAN Button 1-CAN Button 16**.

**Button top, Button middle, Button bottom** — setting the functions of a three-button control panel. The connection diagram will be available later. The options for selecting values are similar to the setting **Hot key 1 type — Nothing, USB Charger, CAN Button 1-CAN Button 16**.

In the menu item **On-board computer > Button setup > Latch filter**, you can configure a filter for more stable button operation. The choice of values from 0 to 10. This setting refers to the four

buttons of the On-board computer **Hotkey 1-Hotkey 4**. Sometimes, especially if the functions are configured for all four buttons, interference may occur that will affect the stability of the buttons. In this case, you can increase the filter value. The button will turn on more slowly (it will need to be held longer), but more stable.

## Screen contrast setup

Menu item **On-board computer > Contrast**. Selecting the contrast level of the On-board computer screen, values from **30** to **100**, in **1** increments. After setting the contrast level, save the settings in the **On-board computer > Save menu**.

## Data sources setup

In the menu section **Onboard computer > Data sources** are configured data sources for various indicators of the Onboard computer.

<pre> Data sources Speed source          Controller Current source       Controller Battery voltage source BMS &gt;Source W/H used.    BMS Wheel circumference   2100 </pre>	<p><b>Speed source</b> — selection of speed data source <b>Controller</b> or <b>Display</b>.</p> <p><b>Current source</b> — selection of the current source data <b>Controller</b> or <b>BMS</b>.</p> <p><b>Battery voltage source</b> — selection of the battery voltage data source <b>Controller</b> or <b>BMS</b>.</p> <p><b>Source W/H used.</b> — select the source of the battery power consumption data <b>Controller</b> or <b>BMS</b>.</p>
--	--

**Wheel circumference** — wheel circumference in millimeters, values from **100** to **3000**, in **1** increments. This setting is used when selecting an external sensor connected to the On-board computer as a speed source.

- The On-board computer supports two ways to determine the speed:
- according to information from the Controller.
  - by a speed sensor (reed switch), which is connected to the On-board computer.

If you select the Controller value, the controller readings will be used as the speed data source. This method is suitable for direct-drive or mid-drive motors without overrunning clutch. After selecting the value Controller, you must:

1. Specify the number of pole pairs for the magnets in the menu **Controller > Motor setup > Pole pair**. The number of pole pairs for different models of motors can be found in the **Motor Information** section. If your motor is not on the list, check with the manufacturer or use an Internet search.

```

50: Motor setup
Motor t°-sensor
Clutch
Manual angle setup
Hall table
>Pole pair          23
Spin direction     Forward
Integration thr.   50.000V
Control mode now   Sensorless

```

2. Enable speed calculation (if disabled) in the **Controller > Extra parameters > Speed calculation** and specify the wheel circumference in millimeters in the **Controller > Extra parameters > Circumference**. You can use the [online calculator](#) to calculate the circumference.

50: Extra parameters	
Disable button	None
Auto shutdown	Off
Sleep time	300 s
Lock at turn-on	Off
>Speed calculation	On
Circumference	1930 mm
Motor sprocket	10 t
Wheel sprocket	10 t

If selecting a value **Display** the speed will be determined from an external sensor, which is used, for example, in a bicycle computer. The speed sensor must be connected according to the diagram to the **SPEED** connector on the rear panel of the On-board computer. After setting the Display value and connecting the speed sensor, you must specify the wheel circumference in millimeters in the **On-board computer > Data source menu**.

## Display heating

In the menu section **On-board computer > LCD heater**, you can turn on the screen heating of the On-board computer. This function is used to correctly display information on the screen in cold weather or when the screen fogs up. Consumption approximately **6W**. Heating works automatically, when the specified temperature is reached, the heating is turned off, when the temperature drops, it turns on again.


LCD heater	
>LCD heater	Off
Heating Temp	40

**LCD heater** — selecting **Off** (Disabled) and **On** (Enabled).

**Heating Temp** — selection of temperature values in degrees Celsius (°C) from **0°C** to **60°C**, in **1°C** increments.

## Password setup

In the menu section **On-board computer > Security** you can set a password that will be requested when turning on the Controller. Without entering the password, the controller will not respond to controls.

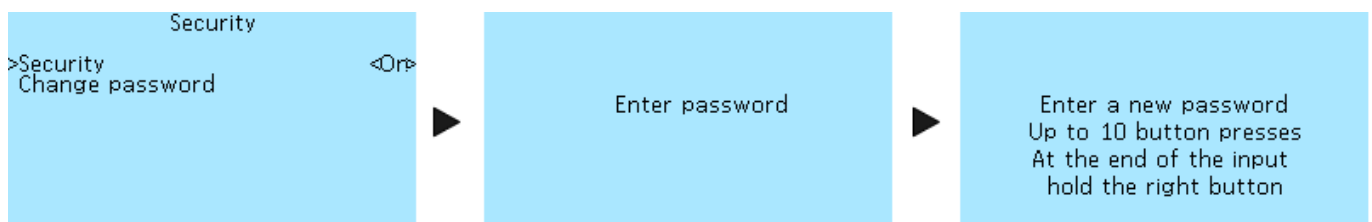

**Security** — enabling the password request function when starting the controller. Select **Off** and **On**.



## Change password — changing the default password.

To set your password, select **On** from the **Security** menu section. Next, go to the menu item **Change password**, you will be asked to enter a password. Enter the default password 1234 by pressing the On-board computer buttons from left to right. Enter a new password, you can assign up to 10 keystrokes. For example, 10 clicks on button 1 or 5 clicks on button 2 and 5 on button 3. After entering the new password, press and hold the right button. Re-enter the new password. Save the settings in the menu **On-board computer > Save** to save the new password.

**Attention! There is no way to recover a forgotten password on your own.** Later, the function of recovering the password by the controller serial number will be added.

## Firmware update

In the menu item **On-board computer > Update software** you can update the firmware of the On-board computer. You can download the latest firmware version in the [Firmware](#) section.

```
Update software
Search SD      OK
File search    OK
File check     OK
File size:     133860
Update?
```

To update, download the firmware file to the root directory of the microSD card with Fat/Fat32 file system. Insert the card, with the contacts on top, into the connector on the On-board Computer. This can be done without turning off the On-board computer, but in this case, you must exit the **Update software** menu and re-enter. After that, the On-board computer will detect the microSD card, display the **File size** in bytes and the menu item **Update?**

Press the right button of the On-board computer to start the update. After restarting, check the firmware version under **On-board Computer > Device Information**.

## Reset settings

In the menu section **On-board computer > Reset settings**, you can reset all settings to the factory settings. To reset, press the right button of the On-board computer.

## Device information

In the menu section **On-board computer > Device info**, you can view basic data on the On-board computer. In this menu you can check what version of the firmware is loaded into your On-board computer.

```
Device info
Device name   Nucular Display
HW version    H12.B00
HW data       Jan 16 2019
SW version    0.60B
SW data       Aug 31 2020
```

**Nucular Display** — device name.  
**HW version** — hardware version.  
**HW data** — date of hardware production.  
**SW version** — firmware version, you can download the latest firmware in the [Firmware](#) section.  
**SW data** — firmware compilation date.

# On-board computer (v.0.7B)

The On-board computer is equipped with a large sunlight resistant screen to display main parameters, driving modes settings, software updates for all system components, battery control, and the charging state of the devices via USB. On the left side of the On-board computer there is a slot for a microSD card, which is used to update the firmware, save screenshots, import and export configurations and settings of the On-board computer and Controller. On the back of the On-board computer there is a power button, which is [configured](#) in the menu **Devices > Controller > Extra parameters > Disable button**.

## Technical specifications:

- LCD size 3.6"
- FSTN, monochrome
- Screen resolution 240×128 px
- Screen heating
- RGB-button backlight
- MicroSD slot
- USB-charger 5.2V 2A
- Password protection
- Multi-Language (English, Russian)
- IP65 class


## In the kit:

- GoPro fork mount.
- USB charging wire.
- PHD 2.0 4P connector — 4 pcs.
- PHD 2.0 6P connector — 1 pcs.
- PHD 2.0 8P connector — 1 pcs.
- Pins for crimping — 26 pcs.
- If you don't have a crimping tool, you need to order "Crimped wires for the Display".

## Connection diagram


You can look at the connection diagrams for other devices at this [link](#). By default, all control devices (thumb throttle, brake levers, switches, etc.) are connected to the ports located on the back of the On-Board Computer. To access, you need to unscrew five screws and remove the plastic cover. For connection, PHD 2.0 connectors and crimp pins are used, which are included in the kit. If you do not have a crimping wire tool, for example, SN-2549, then you need to order "Crimped wires for Display". The On-board computer is connected to the Controller with one CAN-wire 1.2 meters length, which is included in the Controller kit. Note, the CAN-wire from the Controller should be connected to the **SYSTEM** port on the On-Board Computer.

If you want to connect control devices directly to the Controller, you need to order "Controller-side inputs", in the diagram at the link above this switching option is designated as "Alternative connection". You can also use a mixed connection option, for example, connect the thumb throttle to the On-board computer, and the brake levers to the Controller.

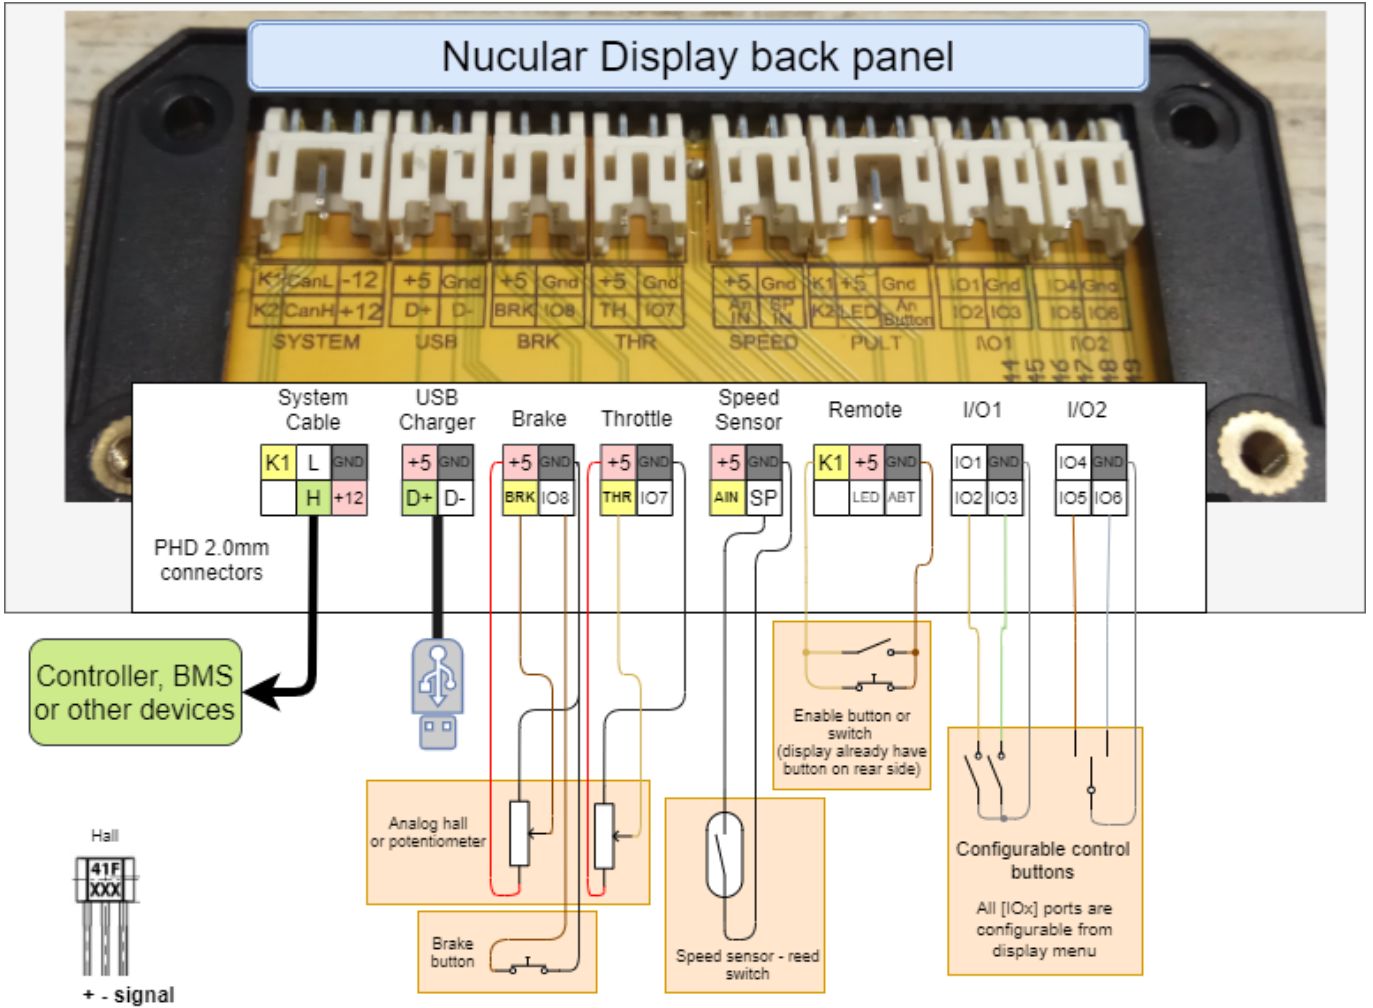

## The main screen overview

The screenshot below is one of the Main screen configurations. The layout of the elements on the screen depends on the theme and settings. In this example, the Hurma theme is installed.

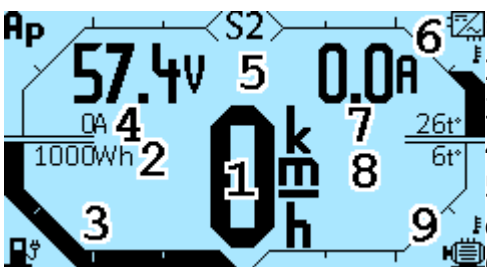

1. Speedometer or fast statistics, when the speed is zero.
2. Battery charge Wh.
3. Battery charge bar.
4. Phase current.
5. Information line, the content of which is changed by up and down keys. The default is Voltage and Battery Current.
6. Controller temperature bar.

7. Controller temperature.
8. Motor temperature.
9. Motor temperature bar.


## Menu navigation

Navigation on the On-board computer screen is carried out by the four bottom buttons. By holding down the two central buttons, you can take a screenshot of the screen, the file will be saved in .bmp

format on the microSD card (if it is inserted into the On-board computer). Functions of the On-board computer buttons, from left to right:

- Switch the menu screen, cancel, return to the previous menu
- Switch up, less
- Switch down, more
- Select, apply

The picture below shows the menu navigation diagram, the red arrow is the left button, the blue arrows are the two central buttons, the green arrow is the right button of the Onboard computer.

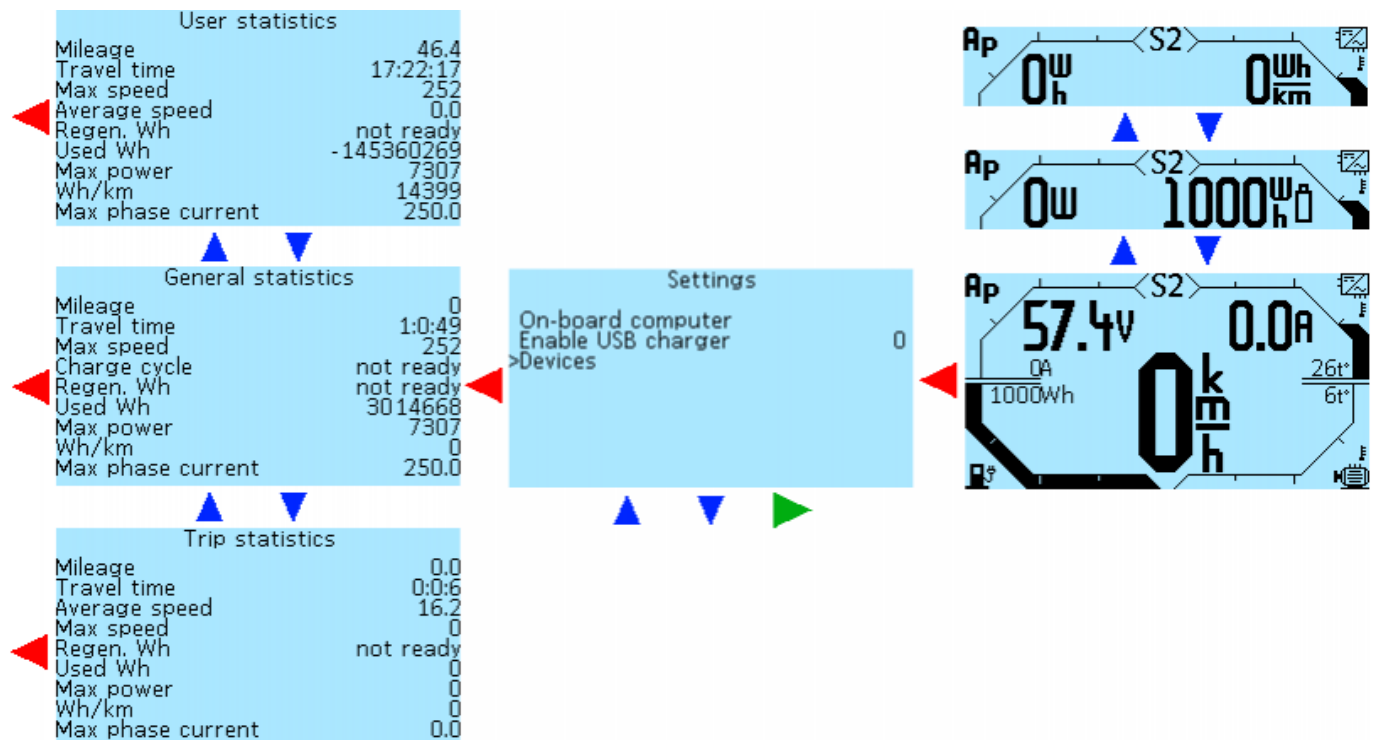

## Statistics

To go from the main screen to the statistics section, double-click the left button of the On-board computer. Then, with the second and third buttons, you can switch screens with statistics **General statistics** > **User statistics** > **Trip statistics** > **From charge statistics**.

General statistics	
Mileage	0
Travel time	1:0:49
Max speed	252
Charge cycle	not ready
Regen. Wh	not ready
Used Wh	3014668
Max power	7307
Wh/km	0
Max phase current	250.0

There are four types of statistics available:

**General statistics** — statistics for all time of using the Controller and On-Board Computer.

**User statistics** — statistics for any time period you choose. You can reset the data when you need it.

**Trip statistics** — statistics since the Controller was turned on.

**From charge statistics** — statistics between battery charges.

User statistics	
Mileage	46.4
Travel time	17:22:17
Max speed	252
Average speed	0.0
Regen. Wh	not ready
Used Wh	-145360269
Max power	7307
Wh/km	14399
Max phase current	250.0

Trip statistics	
Mileage	0.0
Travel time	0:0:6
Average speed	16.2
Max speed	0
Regen. Wh	not ready
Used Wh	0
Max power	0
Wh/km	0
Max phase current	0.0

From charge statistics	
Mileage	0
Travel time	0:9:37
Max speed	0
Average speed	0.0
Regen. Wh	0
Used Wh	0
Max power	0
Wh/mi	0
Max phase current	0.0

The list of parameters that are displayed for each type of statistics are the same and are calculated based on the type of statistics, with the exception of the **Charge Cycles** in the General statistics, instead of this item, in all other types of statistics is displayed the **Average speed** indicator, which is calculated while driving.

- Mileage** — mileage in kilometers or miles (depending on settings).
- Travel time** — driving time, hours, minutes, seconds.
- Max speed** — maximum speed, km/h or mph (depending on settings).
- Charge cycle** — number of battery charging cycles (for General statistics only).
- Average speed** — average speed, km/h or mph (depending on settings).
- Regen Wh** — the amount of energy returned to the battery during regenerative braking, in watt-hours (Wh).
- Used Wh** — the amount of energy consumed, watt-hours (W\*h).
- Max power** — maximum power, watts (W).
- Wh/km (Wh/mi)** — the amount of consumed watt-hours of the battery per kilometer (or per mile) of run, (Wh/km or Wh/mi).
- Max phase current** — maximum phase current, amperes (A).

**Statistics reset:**

**General** — go to the **General statistics** screen, press and hold the left button of the On-board computer, the system will ask for a password, enter the default password or your custom password. For more information on setting up a password, read the Password setup section. After entering the password, the statistics will be reset. If you do not enter the password, then you can return to the main menu only after restarting the On-board computer. You can do this either by deactivating or using the button on the back of the Trip Computer, provided that you have configured it in the section **Devices > Controller > Extra parameters > Disable button**.



**User** — go to the **User statistics** screen, press and hold the left button of the On-board computer, the statistics will be reset.

**Trip** — statistics are reset automatically after controller shutdown.

**From charge** — statistics are reset automatically after full battery charging.

## Menu and settings overview

Pressing the left button on the On-board Computer on the Main screen will take you to the **Settings** menu.

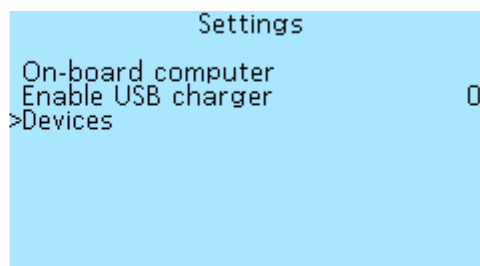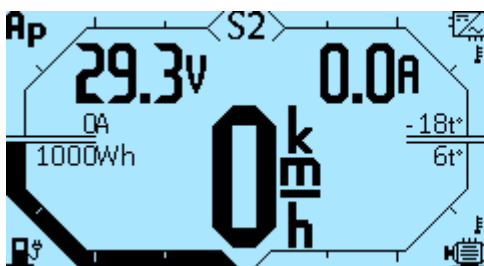

**On-board computer** — setting the parameters and functions of the On-board computer.  
**Enable USB charger** — enable USB

charging, see below for setting description.

**Devices** — list of all connected devices and transition to the menu of each of them for setting.

## USB charger setup

A USB cable for charging your gadgets is included in the kit and plugs into the USB port on the rear panel of the On-Board Computer. To enable charging, go to **Settings > Enable USB charger**, press the right button to select, and then change the value from **0** to **1** with the third button. Then press the right button to save the value and turn on USB charging. If you want the USB charging to be always active when the On-Board Computer is switched on, go to On-Board Computer > Save and save this setting. If this is not done, then when the On-Board Computer is turned on again, the USB charging will be disabled

Buttons setup	
Hot key 1 type	Latching
Hot key 1 func.	USB Charge.
Hot key 2 type	Latching
Hot key 2 func.	Nothing
Hot key 3 type	Latching
Hot key 3 func.	Nothing
Hot key 4 type	Latching
Hot key 4 func.	Nothing
IO1 state	0

You can also configure the activation of charging by pressing and holding one of the buttons on the On-Board Computer (Hot key). To configure this function, go to **On-board computer > Buttons setup**, select which button you want to enable charging. Next, select the **Latching** in **Hot key type** and the USB Charge in **Hot key func.** In the screenshot, we made such a setting for the first button of the On-board computer (Hot key 1). After setting, go to

the **On-board computer** > **Save** and save. Done. USB charging can now be turned on/off by pressing and holding the first button of the On-Board Computer when the main screen is displayed.

### Information

The menu section **Onboard computer** > **Information** displays data from all sensors and devices connected to the Onboard computer.

Supply V 13.77	ACC Z 332	<b>Supply V</b> — CAN bus supply voltage, Volts ( <b>V</b> ).
Int +5V 5.17	Comp t 37	<b>Int V</b> — internal power supply and USB-output voltage, Volts ( <b>V</b> ).
Light V 1.75	IO1 state 0	<b>Light V</b> — light sensor voltage, volts ( <b>V</b> ).
ThrottleV 0.00	IO2 state 0	<b>Throttle V</b> — throttle handle voltage, Volts ( <b>V</b> ).
Brake V 0.78	IO3 state 0	<b>Brake V</b> — brake handle voltage, Volts ( <b>V</b> ).
ACC X 3174	IO4 state 0	<b>ACC X</b> — accelerometer readings X-axis.
ACC Y 3212	IO5 state 0	<b>ACC Y</b> — accelerometer readings Y-axis.
		<b>ACC Z</b> — accelerometer readings Z-axis.
		<b>Comp t</b> — On-board computer processor temperature, degrees Celsius (°C).
		<b>IO1 state</b> — input <b>IO1</b> of the <b>I/O1</b> port on the rear panel of the Onboard computer (see the diagram in the <b>Connection</b> section), the value changes from <b>0</b> to <b>1</b> when the button connected to the Onboard computer is pressed, see the <b>Buttons setup</b> section, the other inputs have are the same values
		<b>IO2 state</b> — input <b>IO2</b> of the <b>I/O1</b> port.

- IO3 state** — input **IO3** of the **I/O1** port.
- IO4 state** — input **IO4** of the **I/O2** port.
- IO5 state** — input **IO5** of the **I/O2** port.
- IO6 state** — input **IO6** of the **I/O2** port.
- IO7 state** — input **IO7** of the **THR (Throttle)** port.
- IO8 state** — input **IO8** of the **BRK (Brake)** port.
- CAN\_OVR** — CAN bus error.
- CAN\_LEC** — CAN bus error.
- CAN\_TEC** — CAN bus error.
- CAN\_REC** — CAN bus error.

### Settings saving

All made settings can be saved in the menu **On-board computer** > **Save**. Press the right button of the On-board computer to save. If you do not save the settings, they will be reset after a restart.

### Buttons backlight

In the menu **On-board computer** > **On-board computer settings** > **Button color and brightness**, you can customize the color of the buttons of the On-board computer.



Button color and brightness		<b>Hue</b> — adjustment of the button illumination color, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
>Hue	100	<b>Saturation</b> — adjustment the saturation of the button illumination, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Saturation	255	<b>Lightness</b> — adjustment the brightness of the button illumination, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Lightness	64	
Auto bright setup		

Also in this menu, you can enable automatic adjustment of the brightness of the buttons using the light sensor located on the front panel of the On-board computer. Menu **On-board computer > On-board computer settings > Button color and brightness > Auto bright setup**.

Button color and brightness		<b>Auto bright setup</b> — <b>Off</b> (Disabled) and <b>On</b> (Enabled). Select <b>On</b> to enable.
>Auto bright setup	Off	<b>Button brightness max.</b> — maximum brightness of buttons, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Button brightness max.	255	<b>Button brightness min.</b> — minimum brightness of buttons, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Button brightness min.	10	<b>Illumination level max.</b> — maximum lighting level, values from <b>1</b> to <b>300</b> , in <b>1</b> increments.
Illumination level max.	290	<b>Illumination level min.</b> — minimum lighting level, values from <b>1</b> to <b>300</b> , in <b>1</b> increments.
Illumination level min.	150	<b>Illumination level actual</b> — current lighting level.
Illumination level actual	247	

## Screen backlight

In the menu item **On-board computer > On-board computer settings > Screen backlight**, you can adjust the brightness of the backlight of the On-board computer screen.

Screen backlight		<b>Backlight</b> — backlight brightness, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Backlight	250	
>Auto bright setup		

If desired, you can enable automatic screen brightness adjustment using the light sensor in the menu **On-board computer > On-board computer settings > Screen backlight > Auto bright setup**.

Auto bright setup		<b>Auto bright setup</b> — <b>Off</b> (Disabled) and <b>On</b> (Enabled). Select <b>On</b> to enable.
>Auto bright setup	Off	<b>Backlight max.</b> — maximum screen brightness in good lighting conditions, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Backlight max.	255	<b>Backlight min.</b> — minimum screen brightness, in low light, values from <b>0</b> to <b>255</b> , in <b>1</b> increments.
Backlight min.	10	<b>Illumination level max.</b> — value from the light sensor at which the maximum brightness is considered, values from <b>1</b> to <b>300</b> , in <b>1</b> increments.
Illumination level max.	290	
Illumination level min.	150	
Illumination level actual	247	

**Illumination level min.** — value from the light sensor at which the minimum brightness is considered, values from **1** to **300**, in **1** increments.

**Illumination level actual** — shows the current value from the light sensor.


We recommend that you first adjust the min/max light level by closing the light sensor with your finger. Then you can adjust the brightness of the backlight. Optimal values for night/day brightness are 30/255. The light sensor must be configured individually because a wide range of readings is possible.

## Screen contrast setup

Menu item **On-board computer > On-board computer settings > Contrast**. Selecting the contrast level of the On-board computer screen, values from **30** to **100**, in **1** increments. After setting the contrast level, save the settings in the **On-board computer > Save menu**.

## Display heating

In the menu section **On-board computer > On-board computer settings > LCD heater**, you can turn on the screen heating of the On-board computer. This function is used to correctly display information on the screen in cold weather or when the screen fogs up. Consumption approximately **6W**. Heating works automatically, when the specified temperature is reached, the heating is turned off, when the temperature drops, it turns on again.

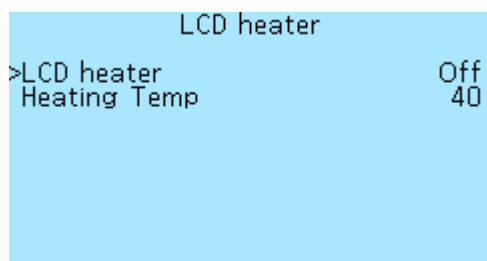

**LCD heater** — selecting **Off** (Disabled) and **On** (Enabled).

**Heating Temp** — selection of temperature values in degrees Celsius (°C) from **0°C** to **60°C**, in **1°C** increments.

## Main screen setup

In the menu section **On-board computer > Main screen setup**, you can configure the interface of the main screen of the On-board computer.

## Information lines

In the menu **On-board computer > Main screen setup > Information lines**, information lines on the main screen are configured, the readings of which are toggled with the two central buttons, to the right and left. You can configure up to five lines. One or two parameters can be displayed simultaneously. All lines are configured identically. After making changes, go to the **On-board computer > Save** and save settings.


**#Line 1 — #Line 5**. Selecting a line number, if you specify only one parameter for a line, then only

one value will be shown on the main screen.

**Left var.** — variable on the left side of the line.

**Right var.** — variable on the right side of the line.

Information lines	
># Line 1	
Left var.	Mileage trip
Right var.	Voltage
# Line 2	
Left var.	Watts
Right var.	Driving range trip
# Line 3	
Left var.	Phase current
Right var.	Unused %
# Line 4	
Left var.	Used Wh trip
Right var.	Wh/km trip
# Line 5	
Left var.	Mileage trip
>Right var.	Mileage from chrg
>Cycling	
>Message	

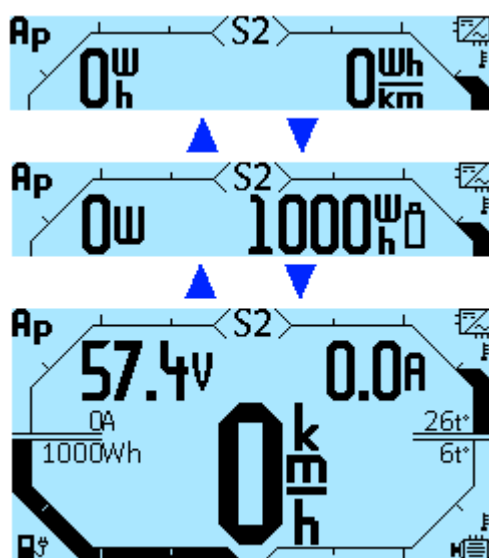

List of parameters available for display:

**Nothing** — parameter is not displayed.

**Voltage** — battery voltage, Volts (**V**).

**Current** — battery current, Amperes (**A**).

**Phase current** — phase current, Amperes (**A**).

**Watts** — electric motor power, Watts (**W**).

**Unused Wh** — remaining battery capacity, Watt-hours (**Wh**).

**Used Wh trip** — energy consumption per trip, Watt-hours (**Wh**).

**Used Wh total** — energy consumption of all time, Watt-hours (**Wh**).

**Used Wh user** — energy consumption per user period of time (reset at will), Watt-hours (**Wh**).

**Used Wh from chrg** — energy consumption since charging, Watt-hours (**Wh**).

**Unused %** — remaining battery charge in percent, (%)

**Wh/km trip** — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**) if you set up a **Speed unit** in mph.

**Wh/km total** — energy consumption per kilometer of all time, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

**Wh/km total user** — energy consumption for a user-defined period of time per kilometer (reset at

will), Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

**Wh/km from chrg** — energy consumption per kilometer since charging, Watt-hours per kilometer (**Wh/km**) or Watt-hours per miles (**Wh/mi**).

**Mileage trip** — mileage per trip, Kilometers (**km**) or Miles (**mi**).

**Mileage total** — mileage of all time, Kilometers (**km**) or Miles (**mi**).

**Mileage user** — mileage for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

**Mileage from chrg** — mileage since charging, Kilometers (**km**) or Miles (**mi**).

**Driving range trip** — driving range per trip, Kilometers (**km**) or Miles (**mi**).

**Driving range tota** — driving range of all time, Kilometers (**km**) or Miles (**mi**).

**Driving range user** — driving range for a user-defined period of time (reset at will), Kilometers (**km**) or Miles (**mi**).

**Driving range from chrg** — driving range since charging, Kilometers (**km**) or Miles (**mi**).

**Mid Speed trip** — average speed per trip, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

**Mid Speed total** — average speed of all time, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

**Mid Speed user** — average speed for a user-defined period of time (reset at will), Kilometers per hour (**km/h**) or Miles per hour (**mph**).

**Mid Speed from chrg** — average speed since charging, Kilometers per hour (**km/h**) or Miles per hour (**mph**).

**Motor t°C** — motor temperature, degrees Celsius (°C).

**Controller t°C** — controller temperature, degrees Celsius (°C).

**Motor RPM** — motor revolutions per minute (**RPM**)

In the menu **On-board computer > Main screen setup > Information lines > Cycling** you can set up automatic scrolling of information lines on the main screen in the specified range.

<pre> Cycling &gt;Switch mode   Cycle start   Cycle end   Cycle time           </pre>	<pre> Manual # Line 1 # Line 1 0           </pre>	<p>You can choose one of the following <b>Switch mode</b> for switching information lines:</p> <p><b>Manual</b> — without automatic scrolling, manual switching using the buttons on the On-board computer.</p> <p><b>Auto range</b> — automatic scrolling in the range of lines.</p> <p><b>All auto</b> — automatic scrolling of all information lines.</p> <p><b>Cycle start</b> — from which line will scroll, values from <b># Line 1</b> to</p>
---	---	--

**# Line 5.**

**Cycle end** — to which line will scroll, values from **# Line 1** to **# Line 5**.

**Cycle time** — time period of automatic scrolling of all values in seconds, values from **1** sec to **255** sec, in **1-sec** increments.

In the menu **On board computer > Main screen setup > Information lines > Message** you can enable or disable pop-up messages by their priority. This functionality has not yet been implemented.

<pre> Message &gt;Tips   Warning   Errors           </pre>
--

## Speed unit

In the menu **On-board computer** > **Main screen setup** > **Speed unit**, you can select the units of measure for speed, in kilometers per hour (**km\_h**) or in miles per hour (**mph**). After making changes, you must go to the **On-board computer** > **Save** and save settings.

## Temperature graphs

For temperature graphs, you can configure the display limits, through the parameters in the section **On-board computer** > **Main screen setup**. If several controllers are connected, the highest temperature of the motor or controller will be displayed. After making changes, you must go to the **On-board computer** > **Save** and save settings.

```

Main screen setup
Information lines
>Speed unit          mph
Start TMotor        40
End TMotor          150
Start TContr        5
End TContr          80
Battery capacity    1000
Theme              Hurma style

```

**Start TMotor** — minimum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

**End TMotor** — maximum displayed motor temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

**Start TContr** — minimum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

**End TContr** — maximum displayed controller temperature in degrees Celsius (°C), values from **5°C** to **250°C**, in **5°C** increments.

## Battery capacity

In the menu **On-board computer** > **Main screen setup** > **Battery capacity** configures the display of the battery capacity on the Main screen. After making changes, you must go to the **On-board computer** > **Save** and save settings.

```

Main screen setup
Information lines
Speed unit          mph
Start TMotor        40
End TMotor          150
Start TContr        5
End TContr          80
>Battery capacity   1000
Theme              Hurma style

```


**Battery capacity** — the energy stored by the battery, in Watt-hours (W\*h), the values from **5 W\*h** to **10000 W\*h**, with increments of **5 W\*h**.

## Main screen theme


In the menu **On-board computer** > **Main screen setup** > **Theme**, you can choose a theme for the main screen interface. At the moment, there are three themes available, suggested by users — VasiliSk, Vitz, Hurma. After choosing a theme, you must go to the **On-board computer** > **Save** and

save settings.


### VasiliSk

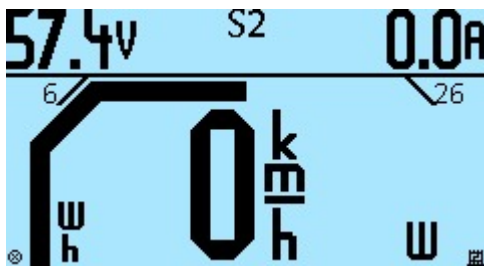

### Vitz

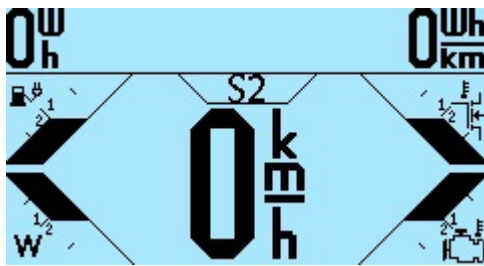


### Hurma

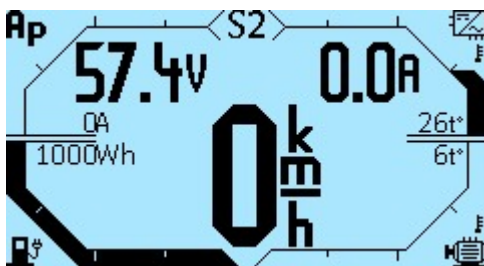

## Quick statistics

Menu item **On-board computer** > **Main screen setup** > **Quick statistics**. Quick statistics are displayed on the main screen instead of the speedometer when the speed is zero. By default, quick statistics is disabled (**Off**).

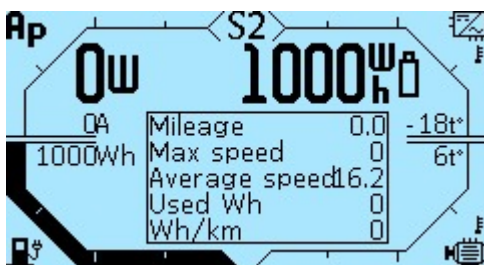

You can choose to display several types of statistics: **General**, **User**, **Trip**, **From charge**. For a detailed description, see the **Statistics** section. The main screen displays five parameters:

- Mileage** — mileage in kilometers (**km**) or in miles (**mi**).
- Max speed** — maximum speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).
- Avg speed** — average speed, in kilometers per hour (**km/h**) or in miles per hour (**mph**).

**Used Wh** — energy consumption per trip, Watt-hours (**Wh**).

**Wh\km** — energy consumption per kilometer per trip, Watt-hours per kilometer (**Wh/km**).

In the future, will be able to function of change the list of displayed parameters.

After enabling the display of quick statistics, you must go to the **On-board computer** > **Save** and save settings.

## Main screen animation

In the menu **On-board computer** > **Main screen setup** > **Demo mode** you can turn on the animation of the status bars on the main screen when starting the On-board computer. Select values **On** and **Off**.

## Buttons setup

Menu **On-board computer** > **Buttons setup** menu allows you to configure the functions of the On-board computer buttons or external control buttons, switches, ignition key connected to the On-board computer. See the diagram in the **Connection** section.

Buttons setup		
Hot key 1 type	Normal	
Hot key 1 func.	Off display l.	
Hot key 2 type	Latching	
Hot key 2 func.	Nothing	
Hot key 3 type	Latching	
Hot key 3 func.	Nothing	
Hot key 4 type	Latching	
Hot key 4 func.	Nothing	
IO1 state	0	
IO1 type	Normal	
IO1 func.	CAN_1	
IO2 state	0	
IO2 type	Normal	
IO2 func.	CAN_2	
IO3 state	0	
IO3 type	Normal	
IO3 func.	CAN_3	
IO4 state	0	
IO4 type	Normal	
IO4 func.	CAN_4	
IO5 state	0	
IO5 type	Normal	
IO5 func.	CAN_5	
IO6 state	0	
IO6 type	Normal	
IO6 func.	CAN_6	
IO7 state	0	
IO7 type	Normal	
IO7 func.	CAN_7	
IO8 state	0	
IO8 type	Normal	
IO8 func.	CAN_8	
Hot key charge mode		
Button top	Nothing	
Button middle	Nothing	
Button bottom	Nothing	
Latch filter	1	
Short press hot key	Off	

Menu items **Hot key 1** — **Hot key 4** — four buttons of the On-board computer, from left to right, are configured in the same way. The function assigned to them is activated by pressing and holding the button for 2 seconds. After setting, you need to save the parameters in the menu section **Onboard computer** > **Save**.

In the items **Hotkey 1 type** — **Hotkey 4 type** you can select the type of control signal that goes to the Controller. Value options:

**None** — turned off.

**Latching** — select, if necessary, that the Controller, when pressing and releasing the button, receives the “on” signal. When pressed and released again - signal “off”.

**Normal** — select, if necessary, that the Controller, when the toggle switch is turned on, receives the “on” signal, when the toggle switch is turned off, the “off” signal. For example, if you want to switch on one of the speed modes on the Controller with a button from the On-board computer. Also, the value **Switch** must be selected if you connect the brake levers with normally open contacts (NO).

**Inverted** — inverted switch state. This value must be selected when connecting brake levers with normally closed contacts (NC).

In menu items **Hot key 1 func.** — **Hot key 4 func.** selects the function assigned to the On-Board Computer button.

**Nothing** — function turned off.

**USB Charger** — the function of turning on and off USB charging by pressing and holding the On-board computer button. You can also enable charging forcibly in the **Settings** menu. See **USB Charging Setup** section above.

**Security block** — enabling a password during charging, so that you cannot change any settings while the battery is charging through the motor.

**Turn off screen backlight** - turn off the screen backlight with one button, for example, when charging.

**CAN\_1** — **CAN\_16** — selection of the CAN-input number when controlling via the CAN-bus. These are



software values, there are fewer physical inputs on the boards, at the moment there are eight CAN-ports **IO1-IO8** available in the On-board computer (see [diagram](#)).

Menu items **IO1 — IO8** — numbers of inputs **IO1-IO8** in the On-board computer. On the back of the On-board computer there is a panel with connectors, where you can connect control buttons and customize their functions. All inputs are configured in the same way. See section **Connection**. To see which input number the button has, go to the **On-board computer > Information menu**, press the button, and see for which input number the value **0** changes to **1**. See the **Information** section.

In menu items **IO1 — IO8** you can select the type of control signal, which is sent to the controller from the inputs **IO1-IO8**, respectively. The options for choosing values are similar to the **Hotkey 1 type** setting — **None, Latching, Normal, Inverted**.

In the menu items **Input 1 func. — Input 8 func.** selects the function assigned to the button connected to the On-Board computer. The value selection options are similar to **Hotkey 1 type — Nothing, USB Charger, Security block, Turn off screen backlight, CAN\_1-CAN\_16**.

The **Hot key charge mode** menu item allows you to customize the functionality of the On-board computer buttons in charging mode, which allows you to use the same button to activate different functions while driving and while charging. The settings are similar to the **Hotkey 1 type-Hotkey 4 type** menu items and **Hotkey 1 func.-Hotkey 4 func..**

**Button top, Button middle, Button bottom** — setting the functions of a three-button control panel. The connection diagram will be available later. The options for selecting values are similar to the setting **Hot key 1 type — Nothing, USB Charger, Security block, Turn off screen backlight, CAN\_1-CAN\_16**.

In the menu item **On-board computer > Button setup > Latch filter**, you can configure a filter for more stable button operation. The choice of values from 0 to 10. This setting refers to the four buttons of the On-board computer **Hotkey 1-Hotkey 4**. Sometimes, especially if the functions are configured for all four buttons, interference may occur that will affect the stability of the buttons. In this case, you can increase the filter value. The button will turn on more slowly (it will need to be held longer), but more stable.

The **Onboard computer > Button setup > Short press hot key** menu item allows you to configure the activation of the function by short pressing the On-board computer buttons, without holding it for 2 seconds.

## Control setup

In the menu section **On-board computer > Control setup**, the parameters of the throttle and brake levers connected directly to the Onboard computer are configured. If the throttle and brake levers are connected to the Controller via control-side inputs, their settings must be done in the **Controller > Control** menu [section](#).

Control setup	
ThrottleV	0.00V
Throttle V MAX	4.30V
Throttle V MIN	1.00V
Brake V	0.78V
Brake V MAX	4.30V
Brake V MIN	1.00V
Throttle auto setting	
Brake auto setting	

**ThrottleV** — current voltage of the throttle grip connected to the On-board computer, in volts (**V**).

**Throttle V max** and **Throttle V min** — the range of the throttle grip, in volts (**V**), selection of values from **0.01V** to **5.00V**, in increments of **0.01V**. If the maximum value is exceeded by 5%, protection against a broken throttle grip will be activated. If your range is incorrectly set, then when you fully press the throttle handle, the electric motor will turn off, in this case you need to increase the range value.

**BrakeV** — current voltage of the brake lever connected to the on-board computer, in volts (**V**).

**Brake V max** and **Brake V min** — range of the brake lever, in volts (**V**), selection of values from **0.01V** to **5.00V**, in increments of **0.01V**.

**Throttle auto setting** — automatic throttle range setup mode. To start the mode, press the right button of the On-board computer and follow the instructions on the screen.

**Brake auto setting** — automatic brake range setup mode. To start the mode, press the right button of the On-board computer and follow the instructions on the screen..

## Data sources setup

In the menu section **Onboard computer** > **Data sources** are configured data sources for various indicators of the Onboard computer.

Data sources	
Speed source	Controller
Current source	Controller
Battery voltage sour.	Controller
Source W/H used.	Controller
Wheel circumference	2100
Mileage total	0.000

**Speed source** — selection of speed data source **Controller** or **Display**.

**Current source** — selection of the current source data **Controller** or **BMS**.

**Battery voltage source** — selection of the battery voltage data source **Controller** or **BMS**.

**Source W/H used.** — select the source of the battery power consumption data **Controller** or **BMS**.

**Wheel circumference** — wheel circumference in millimeters, values from **100** to **3000**, in **1** increments. This setting is used when selecting an external sensor connected to the On-board computer as a speed source.

**Mileage total** — controller's mileage in kilometers (km).

### The On-board computer supports two ways to determine the speed:

- according to information from the Controller.
- by a speed sensor (reed switch), which is connected to the On-board computer.

If you select the Controller value, the controller readings will be used as the speed data source. This method is suitable for direct-drive or mid-drive motors without overrunning clutch. After selecting the value Controller, you must:

1. Specify the number of pole pairs for the magnets in the menu **Controller** > **Motor setup** > **Pole pair**. The number of pole pairs for different models of motors can be found in the **Motor Information** section. If your motor is not on the list, check with the manufacturer or use an Internet search.

```

50: Motor setup
Motor t°-sensor
Clutch
Manual angle setup
Hall table
>Pole pair                23
Spin direction            Forward
Integration thr.         50.000V
Control mode now         Sensorless

```

2. Enable speed calculation (if disabled) in the **Controller > Extra parameters > Speed calculation** and specify the wheel circumference in millimeters in the **Controller > Extra parameters > Circumference**. You can use the [online calculator](#) to calculate the circumference.

```


50: Extra parameters
Disable button            None
Auto shutdown            Off
Sleep time                300 s
Lock at turn-on          Off
>Speed calculation       On
Circumference             1930 mm
Motor sprocket            10 t
Wheel sprocket            10 t

```

If selecting a value **Display** the speed will be determined from an external sensor, which is used, for example, in a bicycle computer. The speed sensor must be connected according to the diagram to the **SPEED** connector on the rear panel of the On-board computer. After setting the Display value and connecting the speed sensor, you must specify the wheel circumference in millimeters in the **On-board computer > Data source menu**.

## Password setup

In the menu section **On-board computer > Security** you can set a password that will be requested when turning on the Controller. Without entering the password, the controller will not respond to controls.

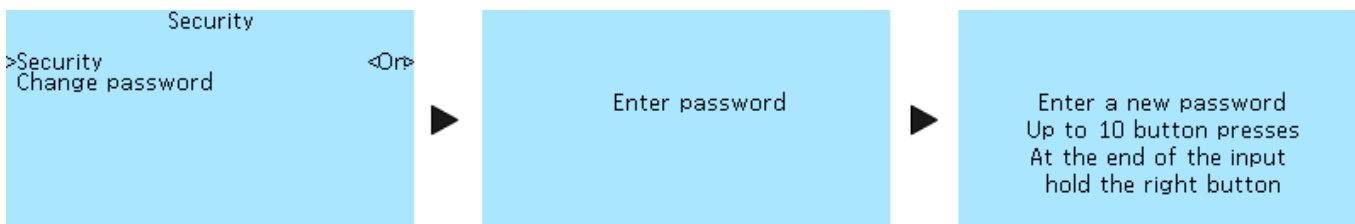

**Security** — enabling the password request function when starting the controller. Select **Off** and **On**.  
**Change password** — changing the default password.

To set your password, select **On** from the **Security** menu section. Next, go to the menu item **Change password**, you will be asked to enter a password. Enter the default password 1234 by pressing the On-board computer buttons from left to right. Enter a new password, you can assign up to 10 keystrokes. For example, 10 clicks on button 1 or 5 clicks on button 2 and 5 on button 3. After entering the new password, press and hold the right button. Re-enter the new password. Save the settings in the menu **On-board computer > Save** to save the new password.

**Attention! There is no way to recover a forgotten password on your own.** Later, the function of recovering the password by the controller serial number will be added.

## Firmware update

In the menu item **On-board computer > Update software** you can update the firmware of the On-board computer. You can download the latest firmware version in the [Firmware](#) section.

```

Update software
Search SD      OK
File search   OK
File check    OK
File size:    133860
Update?

```

To update, download the firmware file to the root directory of the microSD card with Fat/Fat32 file system. Insert the card, with the contacts on top, into the connector on the On-board Computer. This can be done without turning off the On-board computer, but in this case, you must exit the **Update software** menu and re-enter. After that, the On-board computer will detect the microSD card, display the **File size** in bytes and the menu item **Update?**

Press the right button of the On-board computer to start the update. After restarting, check the firmware version under **On-board Computer > Device Information**.

## Reset settings

In the menu section **On-board computer > Reset settings**, you can reset all settings to the factory settings. To reset, press the right button of the On-board computer.

## Import and export of settings

In the menu items **On-board computer > Export parameters** and **On-board computer > Import parameters** you can export and import previously made On-board computer settings to the microSD card.

```

On-board computer
Buttons setup
Control setup
Data sources
Security
Firmware update
Reset settings
Export parameters
Import parameters
Device info

```

**Export parameters** — insert the microSD card into the slot of the On-board computer and press the right button. A file will be created on the microSD card with the name **NDconf0.cfg** — **NDconf9.cfg**, up to a maximum of 9 different configurations. You can open the created file with the “Notepad” program, see all your settings, make any changes, save. Likewise, you can import a previously saved configuration into the On-board computer.

**Import parameters** — import of On-board computer settings configuration from microSD card, file name for import only **NDconf0.cfg**! Click on the right button to import. When importing, a message will be displayed with the number of possible errors, found and accepted parameters.

## Device information

In the menu section **On-board computer > Device info**, you can view basic data on the On-board computer. In this menu you can check what version of the firmware is loaded into your On-board computer.

Device info	
Device name	Nucular Display
HW version	H12.B00
HW data	Jan 16 2019
SW version	0.60B
SW data	Aug 31 2020

**Nucular Display** — device name.

**HW version** — hardware version.

**HW data** — date of hardware production.

**SW version** — firmware version, you can download the latest firmware in the [Firmware](#) section.

**SW data** — firmware compilation date.

From:

<https://docs.nucular.tech/> - **Nucular Electronics**

Permanent link:

<https://docs.nucular.tech/doku.php?id=en:display:start&rev=1633965369>

Last update: **2021/10/11 17:16**