2024/04/29 06:35 1/4 Firmware

Copy files to root directory of microSD card (filesystem FAT32), insert into On-board computer (contacts on top) and run the update process.



Do not downgrade firmware that was installed by the manufacturer! You may get a brick

Each device has its own firmware and is updated separately from different menus. The order in which the firmware is updated does not matter.

- 1. Description of the On-Board Computer update menu.
- 2. Description of the Controller update menu.
- 3. Description of the Microlight controller menu.

To check the current firmware version, go to the **Device Information** menu, each device has a separate menu.

- 1. Information about the firmware version of the On-Board Computer.
- 2. Information about the firmware version of the Controller.
- 3. Information about the firmware version of the Microlight controller.

The list of actual firmware to be downloaded:

| Dianlay | Controllor | Delegge notes |
|---------|------------|---------------|
| Display | Controller | Release notes |



Experimental logger added.

Fixed many charger glitches, however still have few.

Added soft start to charger and more safe phase detect.

Completely reworked field weakening, now should not have any hard braking after release.

Added minimum speed reference for speed PID.

Added RC PWM control on P1 port (throttle/brake).

Added more logger parameters. Few important FOC control fixes, DC current should be calculated better under field weakening.

Fixed one weird ultra-rare bug in square mode.

LEVCAN operates on queues now, log time 2x faster when display updated. Decreased DCi Ki default from 500 to 200.

Slightly decreased FW start point. Added full debug info export. Added logger mode selection and tuned logger start.

Removed first line from log for easy datazap upload.

Throttle / brake curves added (8 point configuration) with presets.

PAS extra scale added for additional modes.

Soft acceleration for cruise added, more shutdown triggers.

Cruise logic updated - phase current limited by selected mode, not throttle position.

Minimum cruise speed - limits cruise activation.

Cruise increment/decrement - control cruise speed with buttons (port = CR+/CR-)

Cruise restore - recovery last saved cruise speed with button, activated only above min cruise speed. (port = CRr)

Power limit added to modes and battery configuration. 0 = power limit disabled.

Small menu fixes.

CAN inputs increased to 16.

Parameters export / import fixes.

12V shutdown fix.

31 August 2020 Use configuration export before update, reset defaults after update and import configuration.

v0.60B

Fixed throttle drop. Small menu fixes. LEVCAN updated.

Button setup simplified, by default all set to CAN mode.

Added exFAT support (but display still can be updated only from FAT32).

Added charge screen. Added fast statistics type selection.

Added wider event window.

Mph stats fixed.

https://docs.nucular.tech/ Printed on 2024/04/29 06:35

2024/04/29 06:35 3/4 Firmware

| v0.59B | | 18 March 2020 HOTFIX for display speed sensor |
|---|---|--|
| v0.58B Fixed 0V throttle issue. Fixed charge statistics reset. Added kmh/mph switch. Added more parameters to info. lines on main screen. Added hotkey mode for compatibility with controller speed functions. Fixed contrast setting. Added driving range, calculated from WH usage. A lot of tiny fixes. | vo.7.12 Torque PAS fixes Fixed configuration import for advanced modes Added configuration selector from 1 to 9 Import will show first line of configuration, you can put a comment here Fixed N mode Fixed motor wiggle at charger mode Added more debug information | 11 March 2020 |
| | v0.7.9 1 | 21 Nov 2019 HOTFIX, fixed NaN error for analog inputs. |

Last update: 2021/09/14 17:26



Big menu update

Control logic completely reworked for future compatibility with BMS New default values for PIDs

DC-DC low voltage difference charge

fixed

Inverted brake input added

Specific setup for 3 positional speed switch added (can work now as 1-2-3) Button/switch select for usual speed

select input

Save CRC calculation fixed New speed mode - neutral

Speed increment and decrement added

Added t-sensor NTC 10k B:3380

Reboot command added

Fixed field weakening over 126% Fixed VBUS measuring, now it is at

PWM frequency, significantly improved overvoltage protection

Added median VBUS filter

Added averaging of N-X ADC samples

filter for throttle and brake Fixed brake glitches

Current measuring fixes for better

measuring on 6F board

When enable button configured controller will not turn-on anymore

when power applied

Autodetect improved, more

informative, short-circuit detect added

and timeout fixed

Added lock-at-turn-on, will lock throttle untill password on-screen is entered Voltage on phases detect added, will

lock controls

UVLO added

Added "Advanced modes" menu with more specific options per mode Personal throttle protection lock for

CAN source or local

Motor temperature limit for charger

(DC-DC)

20 Nov 2019

Export configuration (or make screenshots), after controller update do "Erase data storage" and reboot. Configuration will not be imported fully, some values will need to enter manually.

v0.57B

inputs

CAN buttons setup Inverted inputs setup

Statistics reworked

Added filters for analog

https://docs.nucular.tech/ - Nucular Electronics

Permanent link:

https://docs.nucular.tech/doku.php?id=en:firmware&rev=1631633190

Last update: 2021/09/14 17:26

https://docs.nucular.tech/ Printed on 2024/04/29 06:35